The Ginger Roadster

CATALOGUE OF SPARE PARTS


From Chassis No. 4. AD I. U.

HIII

Car Number including prefix and suffix letters must be quoted on all orders

HHD

Issued by
SINGER MOTORS LTD.
COVENTRY AND BIRMINGHAM ENGLAND

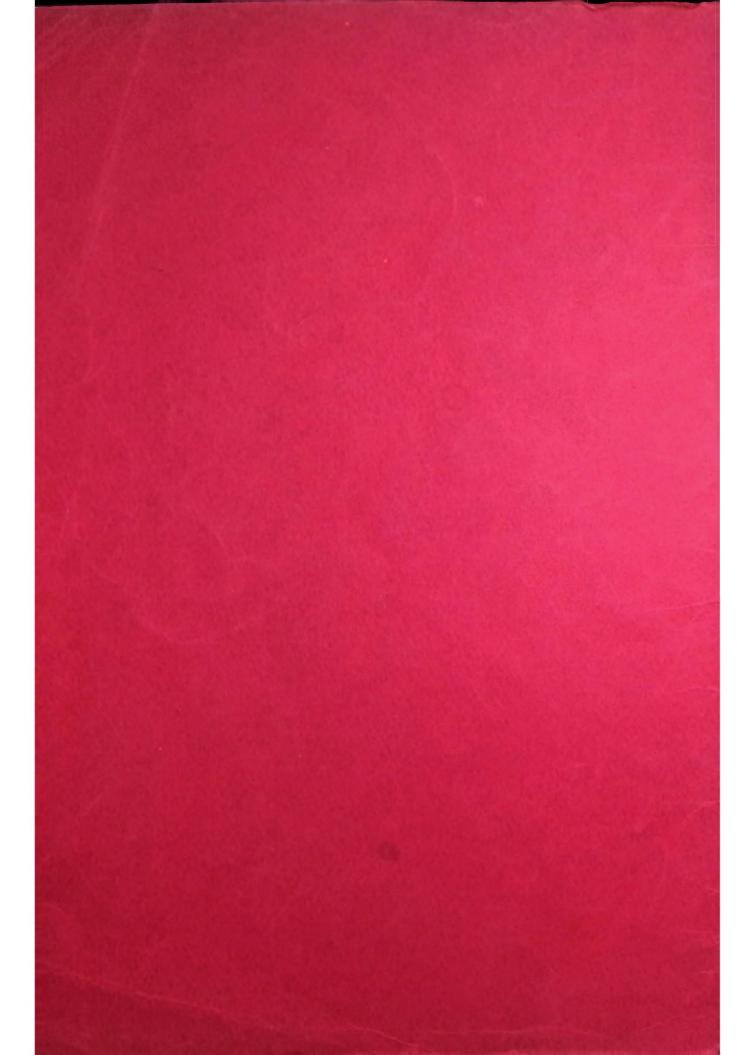

The Ginger Roadster

PRO 7634-8

40 18 mpson Richmond Rd.

CATALOGUE OF SPARE PARTS

From Chassis No. 4. AD 1. U.

111111

Car Number including prefix and suffix letters must be quoted on all orders

113161

Published by
SINGER MOTORS LTD.
COVENTRY AND BIRMINGHAM · ENGLAND

INTRODUCTION

To ensure correct parts being sent, and to avoid delay through inaccurate interpretation of Orders, it is essential to quote the following details:—

- (a) CAR NUMBER: Stamped on Plate, fixed on Bulkhead under Off-side of Bonnet. When quoting Car Number, please ensure that both "Prefix" and "Suffix" letters are given.
- (b) YEAR OF MANUFACTURE AND HORSEPOWER.
- (c) ENGINE NUMBER: On the Offside of the Cylinder Block Flywheel Housing.
- (d) OFFSIDE OR NEARSIDE—FRONT OR REAR: Position should be stated in applicable cases.
- (e) RIGHT-HAND OR LEFT-HAND DRIVE: All orders for Left-Hand Drive should be specifically marked, the abbreviation "L.H.D." being sufficient.

PATTERNS: In cases of doubt, it is advisable to forward patterns, to which the Name and Address of the sender should be securely attached and any reference such as Order Number etc., quoted.

A separate letter of advice is recommended. Patterns will not be returned with the replacements unless instructions to that effect accompany the Order, and will be destroyed unless claimed within 14 days after despatch of replacements.

DRAWING NUMBERS AND FULL DESCRIPTION OF PARTS REQUIRED SHOULD BE STATED IN ALL ORDERS SENT BY POST.

IN TELEGRAPHIC OR CABLE ORDERS THE DRAWING NUMBER AND QUANTITY IS SUFFICIENT. As an example: In cabling for four Pistons complete, the cable should read: "Singer, Coventry Four C.9939A, Name and Address".

PAYMENT: In view of the difficulties inherent in Credit booking on a large scale, goods (in the absence of an approved ledger account) must be paid for on or before delivery. To facilitate despatch, all goods will be sent C.O.D., in accordance with the Post Office Regulations. Where this is not possible, a Pro Forma Invoice will be submitted, if the order is not accompanied by a remittance to cover the cost of part or parts, plus transit charges.

Stocks of Parts are held by our Distributors and Dealers and your enquiries should be made to the appointed Distributor or Dealer covering your area.

In the event of any difficulty, please communicate direct to:-

COVENTRY SERVICE DEPOT Raglan Street - - Coventry

Telegrams: "Singer, Coventry"

Telephone: Coventry 5071

GUARANTEE

Warranty.

THE Company warrants that in the manufacture of new vehicles it has taken all precautions which are usual and reasonable to secure excellence of materials and workmanship and undertakes that if any defect is disclosed in any part of a new vehicle within six months of the date of delivery of such vehicle to the retail customer it will (provided such defective part is returned to the Works Carriage Paid) examine the part alleged to be defective and if on such examination the fault is found to be due to defective materials or workmanship for which it is responsible it will repair or replace the defective part free of

charge.

This Warranty is given in respect of a vehicle purchased by the retail customer as a new vehicle, for which the Company's

full retail List Price has been paid.

The foregoing Warranty is limited to new vehicles manufactured by the Company and is in lieu of any Warranty (or Condition) whether expressed or implied by Common Law Statute or otherwise as to the description quality or fitness for their purpose of any goods manufactured replaced or repaired by the Company every such Warranty (or Condition) whether expressed or implied being in all cases excluded and the liability of the Company under the terms of this Warranty is strictly limited to the replacement or repair and despatch to the Sender carriage forward of the part replaced or repaired. The Company shall not be responsible for any other liability expenses damages or loss which may occur consequent upon any misdescription, defective material or workmanship of any description.

The Warranty shall not apply to any defects caused by or arising in the following circumstances and in which instances all other Warranties (or Conditions) whether expressed or implied by Common Law Statute or otherwise are also expressly

This warranty shall not apply to defects caused or arising under the following conditions:—

During or caused by motor racing.

Wear and tear accident misuse or neglect.

Defects in any vehicle which has been altered in any manner whatsoever or upon which the identification numbers have been altered or removed.

numbers have been altered or removed.

(a) Defects in any vehicle which has been or is let out on hire.

This Warranty shall be construed as including and shall be limited in its application to—

(a) New vehicles or goods manufactured by the Company and which are bought direct from the Company or from one of its duly authorised Distributors, Dealers or Retail Dealers.

(b) Repairs done or replacements supplied by the Company direct, and all other Warranties (or Conditions) whether express or implied by Common Law Statute or otherwise are excluded. The Company gives no Warranty of any description in respect of any Secondhand Vehicles or goods sold by it or by its authorised Dealers or by any other person nor is any Warranty (or Condition) expressed or implied whether arising by Common Law Statute or otherwise in respect of such vehicles or goods.

All agreements and quotations by the Company to supply goods execute repairs or make replacements shall be deemed to include the above Warranty and the exclusion of all expressed or implied Warranties and/or Conditions.

The Company does not warrant the Specialities of other manufacturers fitted to its vehicles such as tyres, electrical fittings, lamps and horns. It endeavours to secure the best quality in these articles and the Makers whose names usually appear thereon are generally willing to replace any defective part. The Company will be pleased at all times to furnish the Maker's name and address.

name and address

Conditions of Warranty.

If a defective part be found in any vehicle or goods it must be sent to the Company's Works carriage paid and accompanied by an intimation from the sender in writing that he desires to have it repaired or replaced free of charge under the Warranty.

The sender must also furnish at the same time

(a) The number of the car.

(b) The name of the dealer if any from whom the car was purchased.

(c) The date of the purchase of the car or the date when the repairs were executed or replacements made

as the case may be.

(a) The Mileage or Kilometres run.

The sender shall accept the Company's decision as final and conclusive on all claims for replacement of or repairs to defective material and/or workmanship and to the exchange of defective parts.

If these conditions are not strictly complied with the goods received by the Company will be at the risk of the Sender and this Weignest whell not be a refereeable.

this Warranty shall not be enforceable. The Company shall not be responsible for the cost of any labour involved in connection with the removal or replacement of any defective parts from or to the vehicle.

Repairs and Replacements.

All parts sent for repair or replacement must be forwarded carriage paid and bear the sender's name and address; the car number and year of manufacture should also be given. The foregoing Warranty is given by the Company in respect of all repairs to vehicles or parts of vehicles executed by it or replacements supplied by it direct but for three months only and subject nevertheless to the reservations limitations and conditions therein contained and all other conditions or warranties whether expressed or implied by Common Law Statute or otherwise are excluded. The Company shall not be responsible for any other liability expenses damages or loss which may occur consequent upon any misdescription defective material or workmanship of any description in connection with any replacements supplied or repairs executed by it. The Company accepts no responsibility whatsoever for any replacements or parts which are not fitted by it to a vehicle even if such replacements or parts are supplied by it. Cars which are sent for repairs will only be driven by the Company's employees at the risk and responsibility of the owners and repairs of cars are undertaken only on the assumption that the owners give authority to drive the cars on their behalf. The Company accepts no responsibility for damage by fire or otherwise to customers' cars or parts thereof whilst on the Company's premises.

Company's premises. SINGER MOTORS LIMITED, COVENTRY.

CONDITIONS OF SALE

A LL new cars and chassis and parts thereof manufactured by SINGER MOTORS LIMITED (hereinafter referred to as "the Company") are sold subject to but with the benefit of the Conditions of Sale hereinafter set forth, and this is so whether the sale is (a) by the Company to a Distributor, Dealer or Retail Dealer, or (b) by the Company direct to the user, or (c) by Distributor or Dealer to a Trader, or (d) by a Distributor, Dealer, Retail Dealer or Trader, to the user:—

- 1. GUARANTEE. The Company's Guarantee, a copy of which is enclosed herein, shall be deemed to be incorporated in these Conditions: to the intent, in the case of a sale by a Distributor, Dealer, Retail Dealer or Trader that he shall pass on the benefit of the Guarantee to his purchaser, who shall be subject to its obligations; but such transfer of the benefit of the Guarantee shall not create any privity of contract between the Company and such purchaser; and every Distributor, Dealer, Retail Dealer and Trader contracts as a principal and not as an agent, and has no authority to give any warranty or make any representation or otherwise act on behalf of the Company.
- 2. PRICE AND PAYMENT. Prices quoted are for delivery at the Company's Works at Birmingham, net cash on delivery. Freightage therefrom to the depot of a Distributor, Dealer, Retail Dealer or Trader is extra.
- 3. **DELIVERY.** Neither the Company nor any Distributor, Dealer, Retail Dealer or Trader shall be liable for any delay in delivery on the part of the Company (whatever the cause of such delay), nor for any damage caused thereby.
- 4. ALTERATIONS IN PRICE AND CONDITIONS. The Company's prices and Conditions of Sale may be altered at any time without notice, and all cars and chassis and parts therefore are sold subject to the prices and Conditions of Sale ruling at the time of delivery.


In the event of increase of price, however, a purchaser may in writing cancel his order within seven days of receiving notice of the increase.

- 5. ALTERATIONS IN SPECIFICATION. The Company's specifications may be altered at any time without notice; and in such event the seller may cancel any order, or goods conforming to the altered specification may be delivered in fulfilment of such order unless, in the case of substantial alterations, the purchaser in writing cancels that order within seven days of receiving notice of the intention to deliver in conformity with the altered specification.
- 6. SPARE PARTS. When ordering spare parts, it is essential that the identification number thereof, as shown in the Company's Spare Parts List, should be given, as well as the chassis and engine number of the car for which they are required.
- 7. DISTRIBUTORS AND DEALERS. (a) Every Distributor, Dealer, Retail Dealer and Trader shall incorporate these Conditions in any contract it makes with a purchaser, either by reference or by setting them out in extenso in the order form. Where such incorporation is by reference only, the Distributor, Dealer, Retail Dealer or Trader shall see that a copy of the Conditions is handed to such purchaser prior to the completion of the contract, and that such purchaser's attention is specifically drawn to them. (b) If any purchaser from a Distributor, Dealer, Retail Dealer or Trader shall commit a breach of these Conditions, the Distributor, Dealer, Retail Dealer or Trader shall, on being required by the Company or his Vendor so to do, take such steps as the Company may think fit, whether by instituting legal proceedings or otherwise, in order to enforce these Conditions.
- 8. **EXHIBITIONS AND COMPETITIONS.** No car or chassis or part thereof shall be exhibited at any exhibition or show or permitted to take part in any competition unless the same is held or approved by the Society of Motor Manufacturers and Traders Limited. Anyone who commits or allows a breach of these conditions renders himself liable to pay damages not exceeding £250.
- 9. **GENERAL.** (a) The Company may allocate any order placed direct with it to its authorised Distributor or Dealer in the appropriate territory. (b) These Conditions and any contract to which these Conditions apply shall be construed according to English Law.

GROUP INDEX

	Page		Page
ENGINE.		BRAKES.	
Engine Case	18	Balance Levers—Operating Rods	
Crankshaft	18	Front Brake Serviceable Parts	
Engine Case Crankshaft Connecting Rods and Pistons	18	Rear Brake Serviceable Parts	. 47
Intermediate Timing Gear and Chains	19		
Rocker Oil Feed Pipe—Oil Relief Valve—		PROPELLER SHAFT.	40
Breather Tube	20	Propeller Shaft	. 48
Timing Gear Tensioner	20	Propeller Shaft Serviceable Parts	. 48
Front and Rear Cover—Fan Pulley—		TT 4 1/17	
Flywheel	21	FRAME.	40
Oil Pump Assembly—Oil Filter—Oil Sump	21	Frame Assembly Master Cylinder—Supply Tank	40
Cylinder Head—Side Plate and Fittings	22	Master Cylinder—Supply Tank	40
Valves and Springs	23	Master Cylinder Serviceable Parts	. 49
Water Outlet Pipe-Distribution Tube-		D D 10 1 01 1 11 1	50
Camshaft Rocker Bar Assembly	23	Rear Road Spring—Shock Absorber .	. 50
Rocker Bar Assembly	24	Brake Details Hydraulic Pipes and Fittings	. 50
Manifold and Bleed Pipe Front Cover—Rocker Cover	24	Hydraulic Pipes and Fittings	. 51
Front Cover—Rocker Cover	24	Brake Reversing Lever—Balance Lever .	. 51
Water Pump and Fan Accessories — Dynamo — Distributor —	25	Handbrake and Handbrake Lever	
Accessories — Dynamo — Distributor —		Brake Coupling Lever—Brake Rods	
Starter—Carburettor	26	Brake and Clutch Pedal Assemblies L.H.D	
CLUTCH.		Clutch Pedal Rod and Brake Operatin	g
Clutch Main Assembly—Housing—Release		Levers L.H.D.	. 53
	30	Exhaust System	. 54
Bearing Clutch Driving Plate Assembly	30	Petrol Tank—Pipes—Fittings	. 54
Clutch Driving Plate Assembly	30	Petrol Pump	. 55
GEARBOX.		Exhaust System Petrol Tank—Pipes—Fittings Petrol Pump Petrol Pump Serviceable Parts Radiator and Connections	. 55
Gearbox Assembly	31	Radiator and Connections	. 56
Layshaft Assembly	31	Road Wheels	. 56
Reverse Gear-Selector Fork	31		
Mainshaft and Gears	32	ELECTRICAL EQUIPMENT	
Rear End Cover and Speedometer Gears	32	Instruments — Controls — Battery -	
Top Cover	33	Side Lamps	. 57
Striker Gear	33	riead Lamps	. 50
Striker Gear	34	Serviceable Parts for Side Lamp, Wine	1-
Change Speed Lever	34	screen Wiper, Stop-Tail Lamp an	id
Change Speed Lever	34	Number Plate	. 60
		Oil Pressure Pipes	. 61
ENGINE MOUNTING.	36	CITACOLO FITTINOS	
Engine Mounting	30	CHASSIS FITTINGS.	40
INDEPENDENT SUSPENSION.		Accelerator Pedal Front—Rear Bumpers Front Wings—Bonnet Sides—Louvres-	62
Bottom Wishbone Assembly	37	Front—Rear Bumpers	02
Outer Support Bracket Assembly Top Arm Assembly Swivel Pins	37	Front Wings—Bonnet Sides—Louvres-	
Top Arm Assembly	37	Stepboards	63
Swivel Pins	37	Front Wing Stays and Flitch Plates	63 64
Swivel Levers	38	Rear Wings Radiator Case—Grille	65
Spring Bottom Carrier	38		
Coil Spring Top Bracket—Coil Spring	38	Bonnet Landings—Bonnet Top	. 65
Axle Swivel—Hub—Brake Drum	39	TOOLS	
Front Stabiliser Bar	39	Tools.	66
Front Shock Absorbers	39	Tools	00
Front Brake Back Plate (Export)	40	OPTIONAL EXTRAS.	
		OPTIONAL EXTRAS.	
STEERING.	40	BODY.	
Front Cross Tube	4.7	Body Shell	66
Steering Column		Doors	67
Steering Column Serviceable Parts	4.0	Door Hinges-Locks-Handles	67
Idler Lever—Tie Rods	40	Body Mounting	68
Tie Rod Serviceable Parts	42	Windscreen	69
REAR AXLE.		Seats	69
Rear Axle Assembly	44	Floorboards	69
Differential Serviceable Parts	4.1	Carpets and Tread Plates	70
Rear Axle Housing	45	Hood—Side Screens	70

PLATE I

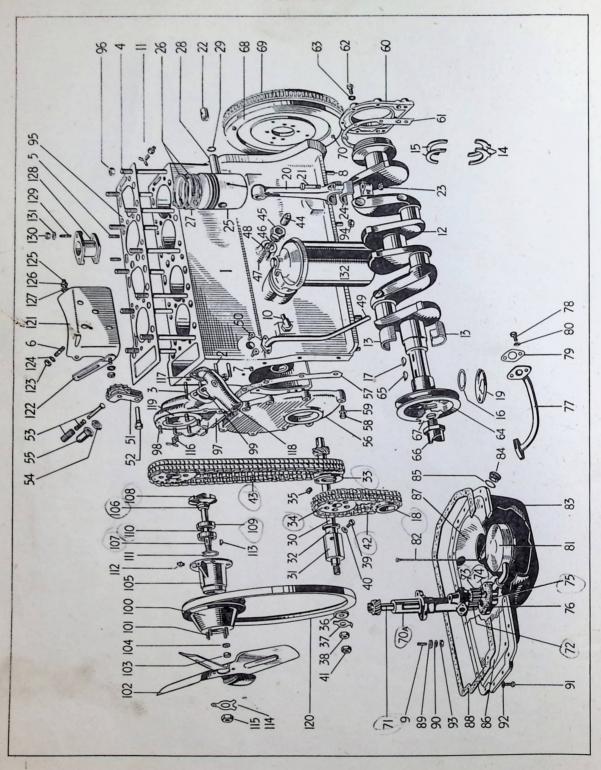

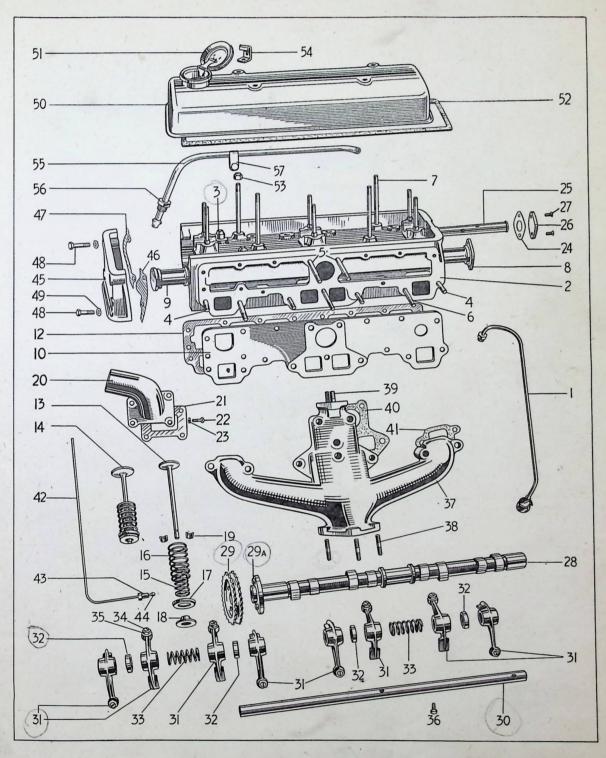


Plate 3

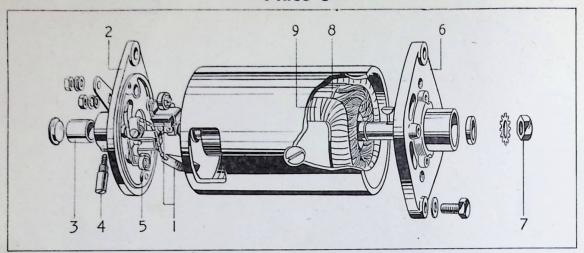


Plate 4

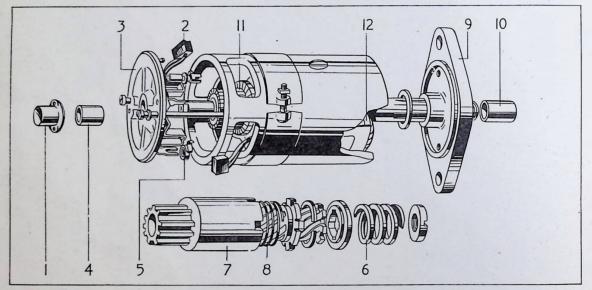
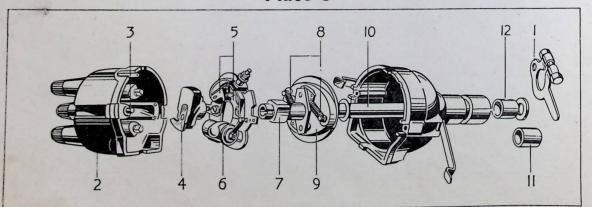
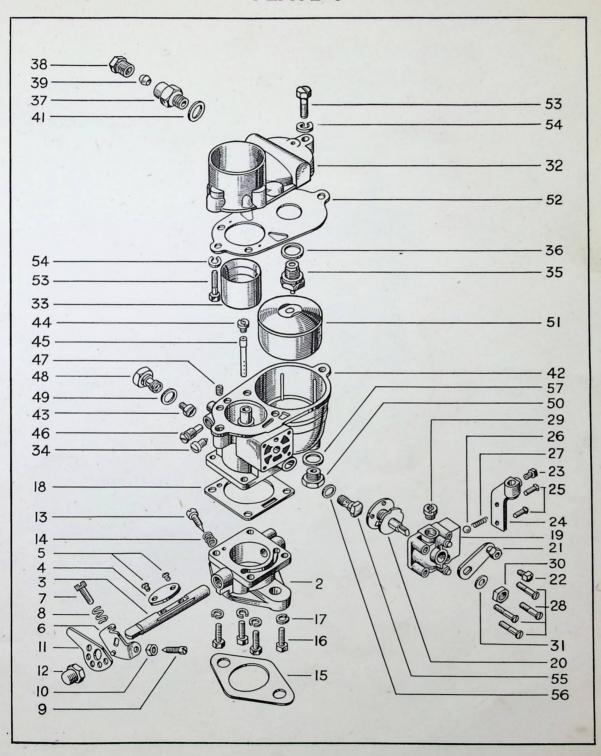
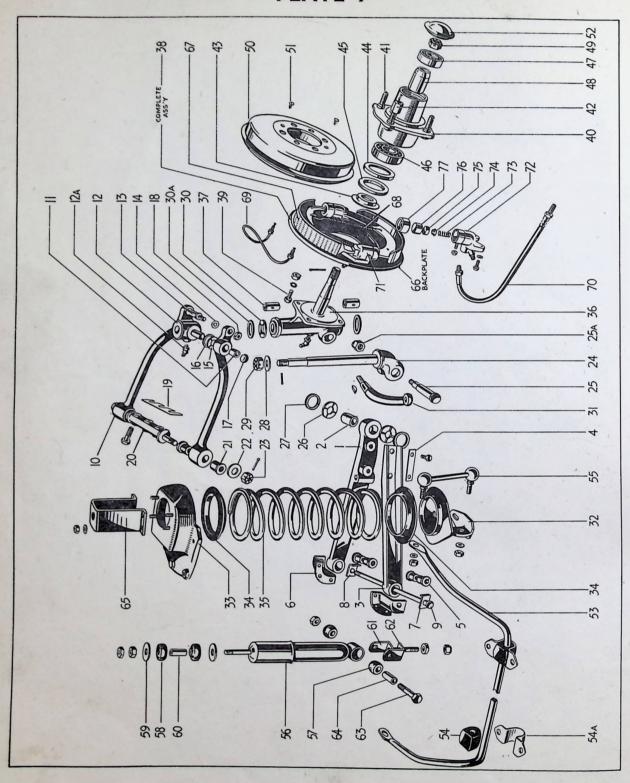


Plate 5











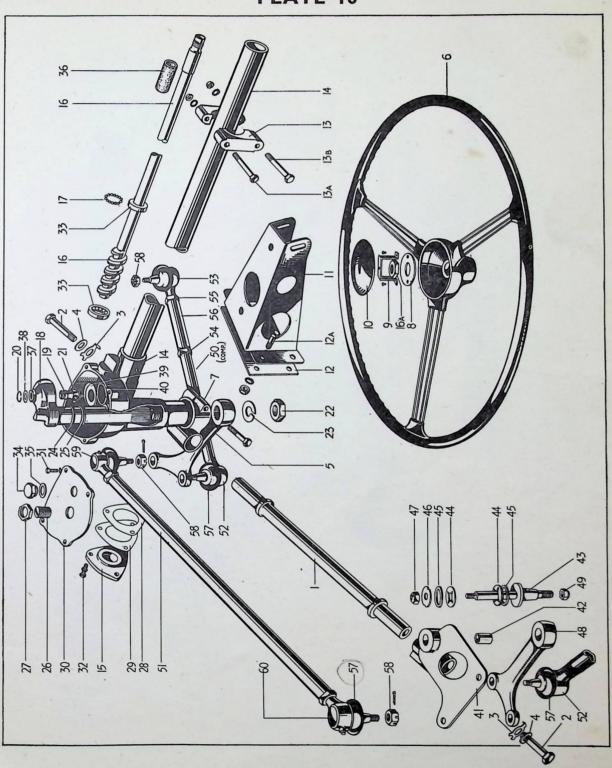


PLATE II

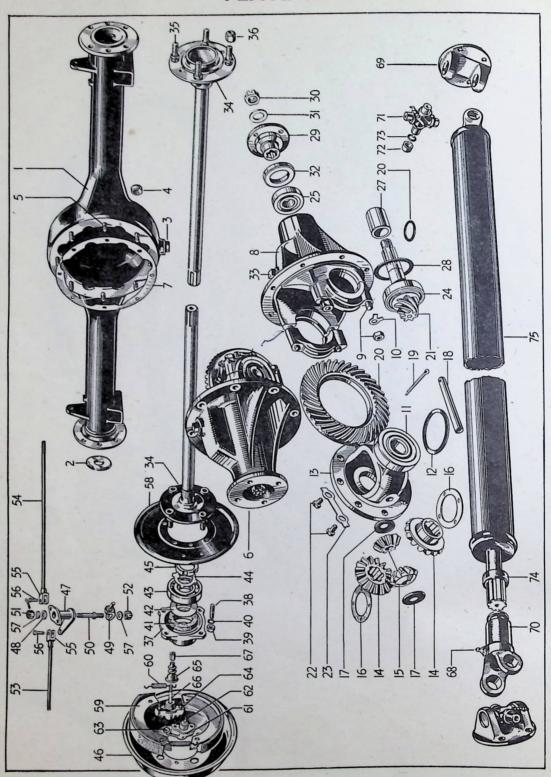

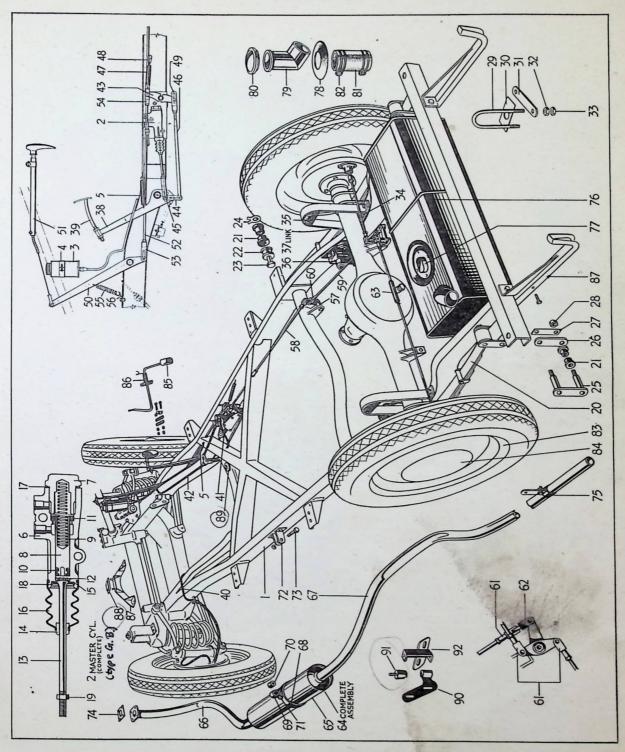

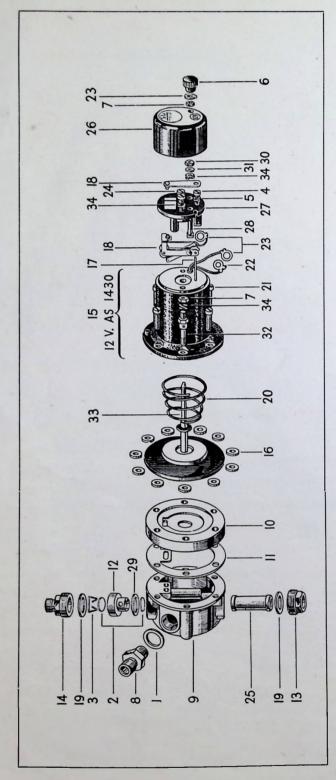

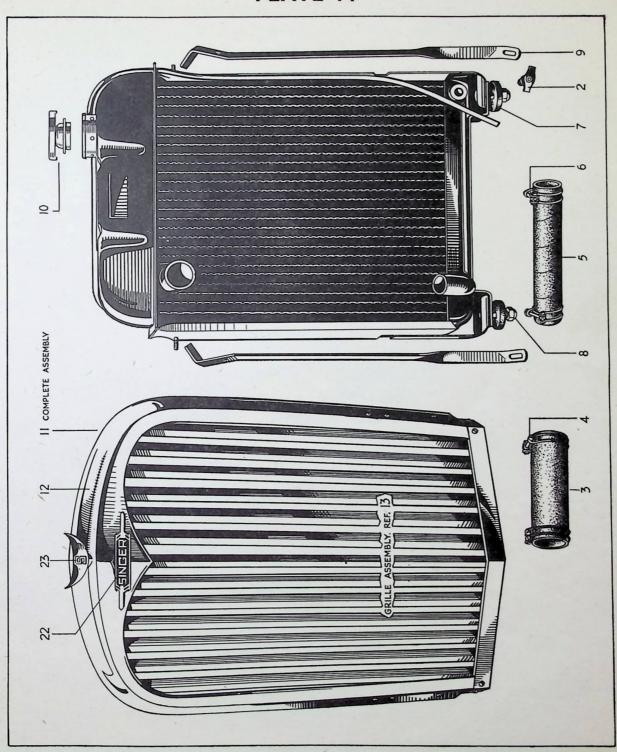

Part No.	PLATE No.	PLATE REF.	Description	No. off	No. off L.H.D.	Remarks
400561 C.10000 N.D. C.9925 FST.7/26F C.6319 76" B.S.F. N.107L C.10428 C.6347 C.6388 C.6526 C.6493 FST.6/19F FST.7/41F FST.4/6 C.6519 FST.4/6 FST.4/6 FST.5/12 FST.4/6	1	2 4 5 7 8 9	Engine Assembly Complete Cylinder Block Studded Assembly Cylinder Block only Studs: Crankshaft Bearing Caps Dowels: Crankshaft Bearing Caps Simmonds Nut: Crankshaft Bearing Caps Nut: Bearing Caps Tabwasher: Crankshaft Bearing Cap Dowel: Rear Cover Plug: Oil Gallery—Front Oil Gallery Plug: Side. Dowel for Clutch Housing Stud: Water Pump to Cylinder Block Stud: Cylinder Head to Block Stud: Distributor Dowel: Front Cover Stud: Oil Sump Stud: Oil Sump Stud: Oil Sump Trays to Block Stud: Oil Pump to Block Stud: Coil to Cylinder Block	1 1 1 6 6 6 6 2 2 1 2 3 10 2 2 6 4 2 2	1 1 1 6 6 6 6 2 2 1 2 3 10 2 2 6 4 2 2	Replaced by N.107L and C.10428 in sets
C.9831 C.9227 C.8350C C.6347 C.7629 C.7629/3 C.7629/10 C.7545		11 12 13	Water Jacket Plate Tap: Water Drain CRANKSHAFT. Crankshaft Dowel: Crank to Flywheel Bearings (Standard) Crankshaft) Bearings (—.003" Undersize) Crankshaft Bearings (—.010" Undersize) Crankshaft Crankshaft Thrust Washer: Top and	1 2 6 6 6	1 2 6 6 6	
C.7733 C.7734 C.7735 Woodruff No. 9 C.7675 C.7703		16	Bottom Half Shim: Crankshaft—Front .003" Shim: Crankshaft—Front .005" Shim: Crankshaft—Front .015" Key: Crankshaft Timing Wheel Timing Wheel: Crankshaft Oil Thrower: Crankshaft	as req as req as req 1 1	uired	
C.7413A C.7541 §" B.S.F.		20 21 23	CONNECTING RODS AND PISTONS Connecting Rod and Cap Assembly Bolt: Connecting Rod	4 8 8	4 8 8	Replaced by
8 D.O.I.		20	Simmonds Nut: Connecting Rod			N.106L and C.10410 in sets

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	Remarks
N.106L	1		Nut: Connecting Rod	8	8	
C.10410			Tabwasher: Connecting Rod Bolt	8	8	
C.7689		22	Bush: Gudgeon Pin	4	4	
C.7630 C.7630/3		24	Bearings (Standard): Connecting Rod Bearings (003" Undersize): Con-	8	8	
			necting Rod	8	8	
C.7630/10			Bearings (—.010" Undersize): Connecting Rod	8	8	
C.9939A		25	Distant Assambly (Standard)	4	4	
C.9939A/5		20	D'	4	4	
C.9939A/15			D' . A 11 / 1 017// O ')	4	4	
C.9939A/30	İ		Piston Assembly (+ .015" Oversize)	4	4	
C.8989		26	Compression Ring (Standard) Plain	4	4	
C.8989/5		20	Compression Ring (+ .005" Oversize)	7	7	
C.0909/3			Plain Oversize)	4	4.	
C8989/15			Compression Ring (+ .015" Oversize) Plain	4	4	
C.8989/30			Compression Ring (+ .030" Oversize)			
C 9000		_	Plain	4.	4	
C.8990			Compression Ring (Standard) Stepped.	4	4	
C.8990/5		-	Compression Ring (+ .005" Oversize)	4	4	
C.8990/15			Stepped Compression Ring (+ .015" Oversize)	4	4	
C.8990/30			Stepped Compression Ring (+ .030" Oversize)			
C.8991		27	Stepped Scraper Ring (Standard)	4	4	-
C.8991/5	-	21	C	4	4	
C.8991/15			C D: (+ 015" O	4	4	
C.8991/30				4	4	
C.7711 N.D.		28	Scraper Ring (+ .030" Oversize) Gudgeon Pin (Standard)	4	4	
C.7711/3 N.D.		20	Condense Dim (002" Occamina)	4	4	
C.7712 N.D.	1 .	29	Circlip: Gudgeon Pin	8	8	-
			INTERMEDIATE TIMING GEAR			
		-	AND CHAINS.			
C.7602		30	Intermediate Timing Shaft	1	1	2 185
C.7570A			Bush Assembly: Timing Shaft	1	1	
C.7570		31	Bush: Timing Shaft	1	1	
C.7571		32	Bush: Timing Shaft	2	2	
C.7676		33	Chain Wheel (Driver): Inter. Shaft	1	1	
Woodruff			YZ			
No. 6			Key	1	1	
C.7677		34	Chain Wheel (Driven): Inter. Shaft	1	1	
C.6379		35	Drive Pin: Chain Wheel	3	3	
C.3521		36	Washer: Chain Wheel		1	
C.3410			Tabwasher: Inter. Timing Shaft	1	1	

Part No.	PLATE No.	PLATE REF.	Discription	No. off	No. off L.H.D.	Remarks
N.108K C.3398 C.3986 N.107K Reynolds	1	38 39 40 41	Nut: Inter. Timing Shaft Locating Screw: Inter. Timing Shaft Locating Washer: Inter. Timing Shaft Locating Nut: Inter. Timing Shaft	1 1 1 1	1 1 1 1	
No. 114038		42	Intermediate Chain, Primary (.375" P. 46 Pitches)	1	1	
Reynolds No. 114038		43	Intermediate Chain, Secondary (.375" P. 86 Pitches)	1	1	
			ROCKER OIL FEED PIPE, RELIEF VALVE—BREATHER TUBE			
C.9953A C.6640	2	1	Rocker Oil Feed Pipe Assembly Tubing Nut: Rocker Oil Feed Pipe	1	1	
C.6641 C.6805 C.3944 C.3948 C.6974 C.6321 C.6428 C.9087 C.8417 C.6646 C.8557 C.8561 F.S.104/4 4" Dia. Ext. 400755 C.7470 C.9893 F.B.104/9 C.6541 W.104/K 4" B.S.F. GKN. EA1	1	44 45 46 47 48 49 50	Assembly Tubing Sleeve: Rocker Oil Feed Pipe Feed Pipe Banjo Tabwasher: Rocker Oil Feed Pipe Feed Pipe Setscrew Sealing Washer: Banjo Oil Relief Valve Plug Nut: Oil Relief Valve Plug Oil Relief Valve Spring: Oil Relief Valve Washer: Oil Relief Valve Breather Tube Assembly Washer: Breather Tube Set Pin: Breather Tube Assembly Washer (Shakeproof) Breather Tube Extension Rocker Oil Feed Pipe Clip Rocker Oil Feed Pipe Clip Bolt Rocker Oil Feed Pipe Clip Washer	1 1 1 1 2 1 1 1 1 1 1 2 2 1 1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 2 1 1 1 1 1 2 2 1 1 1 1 1 2 1 1 1 1 2 1	
			TIMING GEAR TENSIONER			
C.10126 C.10124 C.7991 C.10123 C10125		51	Tensioner Sprocket and Arm Assembly Tensioner Sprocket Assembly Pivot Bush: Chain Tensioner Sprocket: Chain Tensioner Bush: Tensioner Sprocket	1 1 1 1	1 1 1 1 1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
C.7992 C.7764 C.7993 C.7985 C.7987B N.208K	1	52 53 54	Pin, Sprocket: Chain Tensioner Pivot Pin: Chain Tensioner Tabwashers for Pivot Pin Plunger Assembly: Chain Tensioner Spring: Chain Tensioner Locknut: Chain Tensioner Adjuster	1 1 1 1 1 1	1 1 1 1 1 1	
7989		55	FRONT AND REAR COVERS—FAN PULLEY—FLYWHEEL.	I		
C.7664 C.7674 F.B.104/8 W.104/K		56 57 58 59	Front Cover: Cylinder Block Washer: Front Cover—Cylinder Block Bolt: Front Cover to Block Washer: Front Cover to Block	1 1 8 8	1 1 8 8	First Pattern may be serviced by following seven items if dowel C.6519 is removed from cylinder
C.10176 C.10177 C.10178 FB.104/10 FB.104/4 FS.104/4 I" Dia. Ext. C.7610 C.7673 FB.104/8 I" Dia. Ext. C.8196 Woodruff No. 9 N.D.1230 C.9979 C.7706		56 57 60 61 62 63 64 65 66 67	Front Cover Cylinder Block Front Cover Cylinder Retaining Bracket Front Cover Cylinder Washer Bolt: Front Cover to Block Set Pin: Front Cover to Block Retaining Bolt: Cover to Block Shakeproof Washer Rear Cover: Cylinder Block Washer: Rear Cover Bolt: Rear Cover to Block Washer (Shakeproof) Fan Pulley: Crankshaft. Key: Fan Pulley Starting Dog Lockwasher: Starting Dog	1 1 1 2 6 1 9 1 1 6 6 1	1 1 1 2 6 1 9 1 1 6 6 1	block
C.7683D C.7683B C.9692 FB.106/8F C.3053 C.7707		68 69 70	Flywheel Assembly Flywheel	1 1 1 4 2 2 2	1 1 1 4 2 2 2	
400443 N.D. C.7546 C.7555		70A 71	Oil Pump Assembly Body: Oil Pump Shaft: Oil Pump and Distributor Drive	1 1 1	1 1 1	

Part No.	PLATE No.	PLATE REF.	Description	No, off	No. off	Remarks
C.7557 C.7558 Woodruff No. 3 C.7559 C.7556 400391 C.7564A FS.104/4 FB.104/8 ¼" Dia. Ext. Simmonds ¾" B.S.F. (NP/F124) N.105K ¼" Dia. Ext. 400392 400482 C.10132 FS.104/4 C.7569 ¾" Dia. Ext.	1	72 73 74 75 76	Wheel (Driver): Oil Pump Wheel (Driven): Oil Pump Key Shaft: Oil Pump Wheel Distance Piece: Oil Pump Shaft Cover Assembly: Oil Pump Washer: Oil Pump Setscrew: Oil Pump Cover Bolt: Oil Pump Cover Shakeproof Washer: Oil Pump Cover Nut: Oil Pump Shaft Nut: Oil Pump Body to Case Washer: Shakeproof Oil Filter Cover Oil Pipe: Pump to Gallery Assembly Setscrews: Pipe to Pump and Gallery Washer: Oil Pump Flange Washer (Shakeproof) for Oil Pipe	1 1 1 1 1 1 2 2 4 1 1 1 1 1 2 2 4	1 1 1 1 1 1 2 2 4 1 2 1 1 1 1 4 2 4	
C.7598A C.8725 C.6303 C.7600B C.7736B C.7601 W.104K 4" Dia. Ext. FS.104/4 W.104K N.104K N.104K		83 84 85 86 87 88 89 90 91 92 93 94	OIL SUMP. 1 1 1 1 1 1 4 4 15 21 4 6	1 1 1 1 1 4 15 21 4 6		
400562 C.8755 N.D. N.105K 5" Dia. Ext.	2	2	CYLINDER HEAD. Cylinder Head, Studded Complete with Camshaft, Valves and Rockers, etc Cylinder Head: Studded and Valve Guides	1 1 6 6	1 6 6	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
C.7672 FST.5/14 FST.5/22 FST.5/27 C.10237 C.7708A C.7726A CK.104/7 C.7699 C.9831 C.7740	2	3 4 5 6 7 8 9	Valve Guide: Inlet and Exhaust Stud: Inlet and Exhaust Manifold (short) Stud: Inlet and Exhaust Manifold (inter) Stud: Inlet and Exhaust Manifold (long) Stud: Top Cover Plug: Induction Pipe, Rear Plug: Induction Pipe, Front Countersunk Screw: Induction Pipe Plug Dowel: Cylinder Head to Manifold Cylinder Head Water Jacket Plate Cylinder Head Core Plug		8 4 2 3 4 1 1 2 1 2	
+			SIDE PLATE AND FITTINGS			
300265 FS.104/4 C.6541 C.7698		10	Side Plate: Cylinder Head Set Pin: Side Plate to Cylinder Head Washer for Set Pin Sealing Washer: Side Plate	1 6 6 1	1 6 6 1	
			VALVES AND SPRINGS.			
C.7681 C.7682 C.8644 C.8643 C.7771 C.7715 C.7738		13 14 15 16 17 18 19	Inlet Valve Exhaust Valve Valve Spring (Inner) Valve Spring (Outer) Cup: Valve Spring Collar: Valve Spring Split Cotter: Valve Spring	4 4 8 8 8 8 8 8 prs.	4 4 8 8 8 8 8 8 prs.	
			WATER OUTLET PIPE—DISTRIBUTION TUBE—CAMSHAFT.			
C.8244 C.8247 FB.104/8 C.6541 C.7772 C.7742 C.7741 CK.104/7		20 21 22 23 24 25 26 27	Water Outlet Pipe Washer: Water Outlet Pipe Bolt: Water Outlet Pipe Washer: Water Outlet Pipe Washer: Water Outlet Pipe Washer: Water Distribution Tube Water Distribution Tube End Plate: Water Distribution Tube. Countersunk Screw: Water Distribution Tube	1 1 4 4 1 1 1	1 1 4 4 1 1 1	
C 117 11			CAMSHAFT			
C.7753 C.7719 C.6379 FS.106/6		28 29 29A	Camshaft Camshaft	(X) 1 1 3 1	1 1 3 1	

Part No.	PLATE No.	PLATE REF.	Discription	No. off r.u.d.	No. off	Remarks
C6396 C.6395			Washer: Camshaft Chain Wheel Lockwasher: Camshaft Chain Wheel	1 1	1 1	
			ROCKER BAR ASSEMBLY.			
C.10286 C.7678 C.7611A C.7729 C.7730 C.6340 C.6427 FS.104/1 No. 23 C.9769 C.7645B N.107K W.107K	2	30 31 32 33 34 35 36	Rocker Bar Assembly Bush: Valve Rockers Valve Rocker Assembly Thrust Washer: Rocker Locating Spring: Valve Rocker Adjusting Screw: Valve Rocker Locknut: Valve Rocker Adjusting Screw Screw: Locating Valve Rocker Bar Woodruff Key: Cylinder Head Locating Plate: Rocker Bar Screw Cylinder Head Gasket Fixing Nuts; Cylinder Head Washer: Cylinder Head Nuts.	1 8 8 4 2 8 8 1 1 1 1 10 10	1 8 8 4 2 8 8 1 1 1 1 10 10	
			MANIFOLD AND BLEED PIPE.			-
300455 N.D. FST.5/9 FST.5/11 C.8251 C.8252 N.105K W.105K C.7718 C.6235 C.6236 N.D. C.5399 R.H.103/8 N.100/K	2	37 38 39 40 41 42 43 44	Inlet and Exhaust Manifold, Studded Studs: Exhaust Flange Studs: Carburettor Gasket: Inlet and Exhaust Manifold Gasket: Exhaust Manifold Nuts: Inlet and Exhaust Manifold Plain Washers: Inlet and Exhaust Manifold Induction Manifold Bleed Pipe Screwed Bush: Induction Manifold Bleed Pipe Compression sleeve: Induction Manifold Clip: Bleed Pipe Screw: Bleed Pipe Clip	1 4 2 1 2 9 9 1 1 1 1 1	1 4 2 1 2 9 9 1 1 1 1	
			FRONT COVER—ROCKER COVER.			
C.8356B C.8357B C.8358B FB.105/12 -56" Dia. Ext. C.7807A C.10240		45 46 47 48 49 50 51	Front Cover: Cylinder Head Washer N/S: Front Cover Washer O/S: Front Cover Bolt: Front Cover to Cylinder Head Washer (Shakeproof) Rocker Cover Assembly Oil Filler Cap (Westwood)	1 1 1 4 4 1 1	1 1 1 4 4 1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	REMARKS
C.10242 C.7750 N.105K W.105K	2	52 53	Oil Filler Cap Sealing Ring Joint Washer: Rocker Cover Nut: Rocker Cover Plain Washer: Rocker Cover Nut	1 1 4 6	1 1 4 6	
C.5407 C.10091		54	Clip: Accelerator Cable Sealing Washer: Top Cover Studs	1 4	1 4	
			WATER PUMP AND FAN.			
C.9994 N.D. C.10002 N.D.			Water Pump and Fan Complete Assy Water Pump Body—Studded Assembly	1	1 1	
C.9926	1	97	Water Pump Body	i	î	
FST.4/6	•	98	Stud: Fan Bearing Housing	6	6	
FST.4/8		99	Stud: Water Inlet Pipe	2	2	
FST.6/6			Stud: Engine Mounting	2	2	
C.9679 N.D.			Fan Pulley and Blades Assembly	1	1	
C.9742		100	Fan Pulley	1	1	
FST.4/6		101	Stud: Fan Pulley	4	4	
C.9676A		100	Fan Blade Assembly		1	
C.9676 N.104K		102 103	Fan Blades Nut: Fan Blades	2 4	$\begin{vmatrix} 2\\4 \end{vmatrix}$	
¹ " Dia. Ext.		103	TTT 1 (OI 1 C)	4	4	
C.7579A		105	Daning Haveing & Fan	1	1	
C.8733		106	Seal: Fan Bearing Housing	i	i i	
C.7701		107	Drive Shaft: Water Pump	ī	1	
C.7580			Impeller: Water Pump	1	1	
N.206 B.R.			Nut: Impeller	1	1	
Hoffman LS.7		109	Ball Race: Water Pump Spindle	2	2	
C.7590		110	Spacing Collar: Water Pump	1	1	
C.7591		111	Seeger Circlip: Water Pump	1	1	
Tecalemit H1		110				
"B.S.F. Straight Woodruff No. 5		112	Greaser: Fan Bearing Housing	1	1	
C.7655	-	113	Key: Fan Pulley	$\begin{vmatrix} 1 \\ 1 \end{vmatrix}$	1 1	
C.10184		115	NI . W . D . D . Cl . C	i	1 1	
C.9227		116	Drain Tap: Water Pump Body	i	î	
C.7595		117	Washer: Inlet Pipe—Water Pump	i	i	
300261		118	Water Inlet Pipe	1	ī	
N.104K	1		Nut: Water Pump	8	8	
1" Dia. Ext.			Washer (Shakeproof)	2	2	
C.6541			Washer: Water Pump Bearing Housing		6	
C.8177		119			1	
C.10074	137		Washer: Outlet Pipe—Water Pump	1	1	
C.7597			Washer: Rear of Water Pump	1	. 1	
N.106K			Nut: Water Pump to Cylinder Block	3	3	
3" Dia. Ext.			Shakeproof Washer	3	3	Control of the last of the las
5" Dia. Ext. C.9927		120	Washer (Shakeproof)	$\begin{vmatrix} 2 \\ 1 \end{vmatrix}$	2	
0.9941		120	Fan Belt	1	1	

			ZITO.ITZ			
Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L,H,D.	Remarks
C.9930 C.9931	1		Retaining Stud: Water Pump Body and Dynamo	1	1	
			ACCESSORIES.			
Lucas 22258 C.10010 C.9928 FS.105/8	3	-	Dynamo C.39PV2 Dynamo Pulley and Fan Dynamo Mounting Bracket (Rear End) Set Pin: Dynamo Bracket to Engine Case	1 1 1 2	1 1 1 2	
16" Dia. Ext. C.9929 N.105K 16" Dia. Ext. FB.105/9 W.105K 16" Dia. Ext. N.105K W.107K	1	122 126	Shakeproof Washer Dynamo Link Nut: Dynamo Link to Pump Assembly Shakeproof Washer Bolt: Dynamo to Bracket Washer: Dynamo to Bracket Shakeproof Washer Nut: Dynamo to Bracket Dynamo Shaft Washer	2 1 2 1 1 1 1 1 1	2 1 2 1 1 1 1 1 1	
Lucas 25022A FB.106/8 3" Dia. Ext. C.10026	4		Starter Motor M35G (4-Brush Type) Starter Motor Bolt Shakeproof Washer Distance Piece: Dynamo Bracket	1 2 2 2	1 2 2 2	
Lucas 40167E C.7749 FST.44/6 N.104K W.104K ½" Dia. Ext. C.8757 N.D. Champion N.8 Lucas	5 1	128 129 130 131	Distributor Complete	1 1 2 4 2 2 2 4 4	1 1 2 4 2 2 2 4 4	
45020A FS.1041/4 N.104K Solex 30 mm. FA1 N.105K & Dia. Ext. C.9131	6		H. T. Coil Q12 Type LO H.T. Coil Support Bracket Set Pin H.T. Coil Support Bracket Nut Carburettor Carburettor Fixing Nut Shakeproof Washer Carburettor Insulating Washer	1 2 2 1 2 2	1 2 2 1 1 2 2 1 1	
400618 C.6222 400385			Air Silencer with Nuts and Washers Clip: Silencer to Adaptor Air Intake Adaptor	1 1 1 1	1 1 1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	REMARKS
FS.104/6			Air Intake Adaptor Set Pin	1	1	
N.104K			Air Intake Adaptor Nut	1	1	
400533			Air Silencer Steady Stay: Front	1	1	
400534			Air Silencer Steady Stay: Rear	1	1	
400396	1	132	Oil Filter Assembly Complete	1	1	
400519		-	Oil Filter Body	1	1	
400518			Oil Filter Element	1	1	
C.8835		100	Oil Filter Top Cover	1	1	
C.7723			Oil Filter Gasket	1	1	
FB.106/9			Bolt: Oil Filter	2	2	
C.10028	-		Locking Plate: Oil Filter Cover	1	1	
			CARBURETTOR PARTS.			
C.9456 N.D.	6	2	Chamber, Throttle, machined casting only	1	1	
C.9457 N.D.		3	Spindle, Throttle	1	1	
C.9458 N.D.		4.	Butterfly, Throttle	1	1	
C.9459 N.D.		5	Screw, Throttle, Butterfly Fixing	2	2	
C.9460 N.D.		6	Plate, Throttle, Slow Running Adjust-			
= 2		*	ment	1	1	
C.9461 N.D.		7	Screw, Throttle, Slow Running Adjust-		-	
C.9462 N.D.		8	ment Spring, Throttle, Slow Running Adjust-	1	1	
C 0462 N D		0	ment Screw	1	1	
C.9463 N.D.		9	Screw, Throttle, Stop	1	1	1
C.9464 N.D.		10	Nut, Throttle Stop Screw	1	1	
C.9465 N.D.		11	Lever, Throttle	1	1	
C.9466 N.D.		12	Nut, Throttle, Spindle End	1	1	
C.9467 N.D.		13	Screw, Volume Control	1	1	
C.9468 N.D.		14	Spring, Volume Control Screw	1	1	
C.9469 N.D.		15 16	Washer, Flange	1 4	1	
C.9470 N.D. C.9471 N.D.		17	Screw, Throttle Chamber Fixing	4	4 4	
C.9471 N.D. C.9472 N.D.		18	Washer, Throttle Chamber Fixing Screw	-4	4	
C.9412 IV.D.		10	Gasket, Float Chamber to Throttle	1	1	
C 0473 N D		19	Chamber	1	1 1	
C.9473 N.D.		20	Body, Starter Complete	$\begin{vmatrix} 1 \\ 1 \end{vmatrix}$	1 1	
C.9474 N.D. C.9475 N.D.		21	Valve, Starter, Complete	1 1	1	
C.9476 N.D.		21 22	Lever, Starter, Complete Bolt, Starter, Cable Fixing (in Starter	_	1	
C.9470 N.D.		22	-		1	
C.9476 N.D.	- 2	23	Bolt, Starter, Cable Fixing (in Starter		1	
C.9477 N.D.		24	Constitute Cable	i	i	
C.9478 N.D.		25	C 1.1. C	2	2	
C.9479 N.D.		26	D-11 Chamban Walne I agating	1 1	1	
C.9480 N.D.		27	Camara Charter Walne I and Dall	i	1	
C.9481 N.D.		28	Canada Chanton Dader Fireing	4	4	
C.9481 N.D. C.9482 N.D.		29	Tot C A Aim	1	1	
C.7402 IV.D.		27	Jet G.A. Air	1	1	

Part No.	PLATE No.	PLATE REF.	Description	No. off	No. off L.H.D.	Remarks
C.9483 N.D. C.9484 N.D. C.9485 N.D. C.9486 N.D. C.9487 N.D. C.9488 N.D. C.9488 N.D. C.9499 N.D. C.9491 N.D. C.9491 N.D. C.9492 N.D. C.9493 N.D. C.9494 N.D. C.9495 N.D. C.9496 N.D. C.9496 N.D. C.9497 N.D. C.9496 N.D. C.9497 N.D. C.9498 N.D. C.9498 N.D. C.9499 N.D. C.9499 N.D. C.9500 N.D. C.9501 N.D. C.9502 N.D. C.9503 N.D. C.9504 N.D. C.9505 N.D. C.9506 N.D. C.9506 N.D. C.9507 N.D. C.9507 N.D. C.9508 N.D. C.9508 N.D. C.9501 N.D.	6	30 31 32 33 34 35 36 37 38 39 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57	Nut, Starter Spindle End Washer, Starter Spindle Distance Cover, Float Chamber Tube, Choke Screw, Choke Tube Fixing Valve, Needle Washer, Needle Valve Union Nut for Petrol Union Nut for Petrol Union Washer, Banjo Union (Small) Chamber: Float, Bare Jet, Main Bleed, Main Jet Correction Tube, Main Jet Emulsion Jet, Auxiliary Bleed, Auxiliary Bleed, Auxiliary, Jet Air Bolt, Main Jet Carrier Washer, Main Jet Carrier Washer, Main Jet Carrier Sorew, Float Chamber Drain Float Gasket, Float Chamber Assembly Washer, Float Chamber Assembly Washer, Jet Washer, Jet Washer, Float Chamber Drain Plug Washer, Float Chamber Drain Plug			
*415256 *409563	5	1 2	SERVICEABLE PARTS FOR DISTRIBUTOR. Plate Assembly			
*404435 *400051 *407050 *409613 *406329 *416042/S *400147 *409582 *410590 *404374		3 4 5 6 7 8 9 10 11 12	Brushes and Spring Assembly Rotor Arm Assembly Contact Set Condenser Cam Assembly Springs: Automatic Advance Weights: Automatic Advance Shaft and Action Plate Bearing, Bush, Top Bearing, Bush, Button			
			*Lucas Accessories			

Part No.	PLATE No.	PLATE REF.	Description	No. 6		REMARKS
			SERVICEABLE PARTS FOR STARTER MOTOR.			
*250599	4.	1	Shaft Cap			
*251108	-	2	Brush Set		-	
*251104		3	Bracket, Commutator End			
*250626(2504z	()	4	Bush, Commutator End			
*251109	')	5	Brush Spring Set			
*250404		6	Main Spring			
*250698		7	Pinion and Barrel Assembly			
*250691		8	Pinion Retaining Spring			
*250412		9	Donatas Daine Dai			
*250678		10	Decale Declare Decal	• •		
*250851		11				
*251089		12	T! 11 0 !!			
*249695		14		•••		
247093			Sundry Parts Set	••		
			SERVICEABLE PARTS FOI	R		
			DYNAMO C39PV/2.			
			2111111120 0371 1/21			
*227305-627818	1 3	1	Brush Set			
*227702		2	Bracket, Commutator End			
*227713		3	Bush Commutator End, Bearing			
*238367		4.	Oiler Assembly			
*228159		5	Spring Set Brush Tension			
*189307		-	Bearing, Driving End			
*227698		6	Bracket Assembly: Driving End			
*227693		8	Armature Assembly			
*180740		7	Armature Shaft Nut			
*227291	- 5	9	Field Coils			
*104030			Through Bolt 4" B.S.F			
*227726			Sundry Parts Kit			
221120		-	Canaly Lates Lite			
			*Lucas Accessories			
			240401100			

CLUTCH

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			CLUTCH MAIN ASSEMBLY— HOUSING RELEASE BEARING.			
C.8840 N.D.	7		Clutch Housing Assembly	1	-	
C.9156 N.D.			Clutch Housing Assembly	_	1	
C.8210B		12	Clutch Housing	1	_	
C.8210C			Clutch Housing		1	
C.2138		13	Clutch Fulcrum Bracket	1	1	
FB.105/6		14	Clutch Fulcrum Bracket Set Pin	2	2	
5." Dia. Ext.			Shakeproof Washer	2	2	
C.2137	1	15	Clutch Withdrawal Lever	1	1	
C.2139			Clutch Withdrawal Lever Pin	1	1	
FST.6/13			Gearbox and Clutch Housing Stud	6	6	
C.9451 N.D.		10	Clutch Release Bearing and Cup Assy	1	1	1
C.9452 N.D.	-	11	Clutch Release Bearing Retainer	2	2	
C.10508 N.D.			Clutch Main Assembly	1	1	-
C.6194		1	Clutch Spigot Bearing	1	1	-/-
FS.105/5			Clutch Fixing Set Pins	6	6	
5" Dia. Ext.			Shakeproof Washers	6	6	
C.10252A		16	Clutch Housing Cover	1	1	
FS.104/4		1	Cover to Housing Set Pin	3	3	
¼" Dia. Ext.		-	Shakeproof Washer	3	3	
FB.105/10			Gearbox Clutch Assembly to Case Bolt	5	5	
FB.105/12			Gearbox Clutch Assembly to Case Bolt	3	3	
FB.105/16	-		Gearbox Clutch Assembly to Case Bolt	2	2	
W.105K	İ		Gearbox Clutch Assembly to Case Washer		2	
5" Dia. Ext.			Shakeproof Washer	8 6	8 6	
N.106K 3" Dia. Ext.		1	Clutch Housing to Gearbox Unit Nut	6	6	
8 Dia. Ext. C.6141			Shakeproof Washer	1	1	
C.10511 N.D.		1A	Clutch Housing to Gearbox Washer Clutch Driven Plate (B & B45962/24)	1	i	* * * * * * * * * * * * * * * * * * * *
C.9454 N.D.		IA	Clutch Facing Package (2 Facings 42415	1	1	
C.5454 IV.D.			and 22 Rivets 44055)			
C.9440 N.D.		2	Cover	1	1	
C.9441 N.D.		4	Thrust Springs (Cream)	6		
C.9442 N.D.		3	Pressure Plate	1		
C.9443 N.D.		7A	Eye Bolt	3	- 1	
C.9444 N.D.	-	8	Nut: Eye Bolt	3		
C.9445 N.D.		6	Release Lever	3		
C.9446 N.D.		7C	Pin: Release Lever	3	-	
C.9447 N.D.		7B	Strut	3		
C.9448 N.D.		5	Release Lever Plate	1		
C.9449 N.D.		7	Retainer: Release Lever Plate	3		
C.9450 N.D.		9	Springs: Anti-Rattle	3		
						-

PART No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	REMARKS
			GEARBOX.			
400563 N.D.			Clutch Housing & Gearbox Assembly	1		
400564			Clutch Housing & Gearbox Assembly		1	
400615	7	19	Gearbox Casing: Studded	1	1	
400382 C.2625		19A	Gearbox Casing: Studded Clutch Pedal Shaft	1	1	
No. $3 \times 1\frac{1}{2}$		17/1	Taper Pin	î		
FST.5/9		20	Gearbox to End Cover Stud	7	7	
FST.5/9		21	Gearbox to Top Cover Stud	6	6	
C.6372		22 23	Drain Plug	1	1 1	
C.6303 C.6347	-	23A	Drain Plug Washer	2	2	
-						
	-		LAYSHAFT ASSEMBLY.		-	
400536	7		Layshaft Gear Assembly	1	1	
C.6149		24	1st Speed Layshaft Gear	1	1	
C.6150		25	2nd Speed Layshaft Gear	1	1	
C.7006		26	3rd Speed Layshaft Gear	1	1	
400527 C.6188		27 27A	4th Speed Layshaft Gear	1 1	1 1	
C.6186		28	Layshaft Gear Spring Ring Layshaft Gear Thrust Washer, 2½" dia.	1	-	
0.0100	* - 1		by .53"	1	1	
C.6763		29	Layshaft Bush	2	2	
C.6088		30	Layshaft			2 1
C.7397A C.7398A		31 31	Thrust Washer Assembly, $2\frac{1}{4}$ o/d. \times 140 Thrust Washer Assembly, $2\frac{1}{4}$ o/d. \times 144 Thrust Washer Assembly, $2\frac{1}{4}$ O/d. \times 144 Thrust Washer Assembly, 21			l per set >as
C.7399A		31	Thrust Washer Assembly, $2\frac{1}{4}$ o/d. \times 149"			Required
C.6122A		31A	Thrust Washer Assembly, $1\frac{3}{4}$ "o/d. $\frac{5}{16}$.39" i/d			J resquired
C.7396	-		Thrust Washer, $1\frac{11}{16}^{\prime\prime}$ o/d $\frac{5}{16}$ $\frac{3}{4}^{\prime\prime}$ i/d			
			REVERSE GEAR—		-	
			REVERSE SELECTOR FORK.			
C.10158	7	32	Reverse Gear Assembly	1	1	
C.10157	'		Reverse Gear	1	1	
C.10159			Reverse Gear Bush	2	2	
C.6119		33	Reverse Gear Shaft	1	1	
C.6196		34 35	Reverse Gear Retaining Plate Reverse Gear Retaining Pin	1 1	1	
C.6123 C.6092		36	Reverse Gear Retaining Pin Reverse Selector Fork	i	1	
C.6112A		37	Reverse Selector Retainer Plate Assembly	i	i	
W205K		38	Reverse Selector Retainer Guide Pin			
N. 10577		0.0	Washer	2	2	
N.405K		39	Reverse Selector Retainer Guide Pin Nut Reverse Selector Retainer Guide Pin	2	2	
SP.206		- 4	Split Pin	2	2	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			MAINSHAFT AND GEARS.			
400736	7	40	Mainshaft	1	1	
C.6095		41	Mainshaft Thrust Washer	3	3	
C.6094		42	Mainshaft Gear Bush	1	1	
C.6081		43	2nd Speed Mainshaft Gear	1	1	
C.7018		44	3rd Speed Mainshaft Gear Assembly	1	1	
C.9059			3rd Speed Mainshaft Gear Bush	1	1	
C.9058		4-	Key: Thrust Washer	1	1	
C.7027		45	3rd and 4th Speed Synchro Sleeve Assy.	6	6	
C.2288 C.6954 N.D.			3rd and 4th Speed Synchro Sleeve Spring	6	6	
C.9934 N.D.		46	3rd and 4th Speed Synchro Sleeve Ball 3rd and 4th Speed Synchro Sleeve Dog	1	1	
C.7250		47	2nd Speed Synchro Sleeve Assembly	î	î	Up to Gearbox
C.1200		7.	Zha Speca Synchro Siceve Hissembly	1	_	No. 4AD 322U
C.10335			2nd Speed Synchro Sleeve Assembly	1	1	From Gearbox No. 4AD 323U
C.6663		48	1st Speed Gear Stop	1	1	Up to Gearbox No. 4AD 322U
C.10336			1st Speed Gear Stop	1	1	From Gearbox No. 4AD 323U
C.9022			Seeger Circlip for Mainshaft	1	1	No. 4AD 3230
C.6990		49	2nd Speed Synchro Spring	6	6	
5." Dia.		50	2nd Speed Synchro Ball	6	6	
C.10333			Locking Pin 2nd Speed Synchro Sleeve	1	1	From Gearbox No.
C.6954			Locking Ball 2nd Speed Synchro Sleeve	1	1	74AD 323U
400630		51	1st Speed Mainshaft Gear	1	1	Up to Gearbox
			•		-	No. 4AD 322U
400737	-		1st Speed Mainshaft Gear	1	1	From Gearbox No. 4AD 323U
C.6760		52	Rear Bearing	1	1	
C6530		53	" " Spring Ring	1	1	
			CONSTANT MESH PINION.			
100525		E1	Constant Mach Pinion Assembly	1	1	
400535 C.6115		54 55	Constant Mesh Pinion Assembly Constant Mesh Bearing	1	i	
0 (22)		56	Constant Mesh Bearing	1	i	
C.6116 C.6125	-	57	Constant Mesh Bearing Lockwasher	î	- î	
C.6124		58	Constant Mesh Bearing Locknut	l î	i	,
C.6143	-	59	Constant Mesh Bearing Bush	1	1	
			REAR END COVER AND SPEEDO. GEARS.			
C.6128		60	Speedo. Gears	1	1	
C.6140		61	End Cover Joint Washer	1	1	

Paut No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
400371 C7051 400552 400553 N.105K W.105K C.9075 C.6848 C.7017 SP.412 FB.105/7F N.105K C.6304 400589 400565	7	62 63 66 68 64 65 70	Rear End Cover Oil Seal: Rear End Cover Thrust Button: Speedo. Pinion Bush: Speedo. Pinion End Cover to Gearbox Nut End Cover to Gearbox Washer Speedo. Pinion Universal Joint Flange Universal Joint Flange Nut Universal Joint Flange Split Pin Propellor Shaft Bolt Propellor Shaft Nut Propellor Shaft Lockwasher Rear End Cover Speedo Gear Assembly Rear End Cover with Bushes	1 1 1 2 7 7 1 1 1 4 4 4 1 1	1 1 2 7 7 1 1 1 4 4 4 1 1	Comprises 400371 and 400553
C.6962			Dipstick Cork	1	1	
			GEARBOX TOP COVER.			
C.9362 C.8173 C.6075 C.6076 C.6096 FST.5/11 N.105K W.105K C.7411 N.206K W.106K C.6130 N.105K C.6130 N.105K C.6097 C.6120 C.6129 2BA/B3 316 Dia. Ext. C.6836 C.6114	8	72 73 73A 73B 73C 83 83A 84 85 86 87 88 89 90 91	Gearbox Top Cover Complete Assembly with Striker Gear, Remote Control and Change Speed Lever, etc. Gearbox Top Cover Sub-Assembly Gearbox Top Cover Gearbox Top Cover Cap Stud: Selector Fork Housing Stud: Top Cover to Cap Nut: Top Cover to Cap Washer: Top Cover to Cap Bolt: 4th Speed Selector Stop Locknut: 4th Speed Selector Stop Washer: 4th Speed Selector Stop Gear Locating Body Adjuster Nut: Gear Locating Body Adjuster Ferrule: Reverse Stop Spring: Reverse Stop Retaining Plate: Reverse Stop Screw: Retaining Plate, Reverse Stop Shakeproof Washer Reverse Lever: Fulcrum Pin STRIKER GEAR.	1 1 1 1 4 2 6 6 6 1 1 1 1 1 1 1 2 2 1	1 1 1 1 4 2 6 6 6 1 1 1 1 1 1 1 2 2 1	Assembly C.8173
C.7299 C.6093A C.6087		92 93 94	1st/2nd and 3rd/4th Striker Fork Reverse Striker Bar Selector Fork Housing	2 1 1	2 1 1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
C.6104 C.7387 C.6105 C.6837 C.6113 W.106K SP.206 C.6870 N.105K	8	95 97 96 98 98A 98B 98B	Selector Fork Plunger Selector Plunger Sealing Washer Selector Fork Plunger Spring Reverse Link Reverse Link Lever Pin Reverse Link Lever Pin Washer Reverse Link Lever Pin Split Pin Selector Housing Tabwasher Selector Housing Nut	3 3 3 1 1 2 2 4 4	3 3 3 1 1 2 2 4 4	
			REMOTE CONTROL.			
C.8171 C.6060 C.6133 FST.4/10		74 75 75C	Remote Control End Housing Sub-Assy. Remote Control End Housing Remote Control Tube	1 1 1 3	1 1 1 3	
Tota. C'sk. **X* **FB.105/16 N.105K W.105K C.6121A C.6098 C.6099A C.6101A C.6100B C.7026 N.106K W.106K C.6347		75D 75A 75B 76 77 78 79 80 81		2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2 1 1 1 1 1 1 1 1 1 1 1	
			CHANGE SPEED LEVER AND TOP COVER FIXINGS.			
C.9315A C.6998		99 100	Change Speed Lever Assembly Change Speed Lever Cap	1 1	1	
Simmonds ½" B.S.F. C.2631 C.6139 N.105K W.105K	7 8	101 102 102B 102A	Change Speed Lever Cap Nut Change Speed Lever Knob Top Cover to Gearbox Joint Washer Top Cover to Gearbox Nut Top Cover to Gearbox Washer	3 1 1 6 6	3 1 1 6 6	
	-		CLUTCH PEDAL.			
400116 N.107K C.5669A C.6723	7	103 105 104 106	Clutch Pedal Assembly Clutch Pedal Rod Eye Nut Clutch Pedal Pad and Rod Assembly Clutch Pedal Tread Rubber	1 2 1 1		

PART No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
FS.105/10 N.105K Tecalemit H1 C.6445 400129 C.6349 C.6403 N.205K W.105K C.6312 W.206K	7	107 108 110 111 112 113 114	Clutch Pedal Stop Bolt	1 1 1 1 1 1 1 3 1 1	1	

ENGINE MOUNTNG

PART No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			ENGINE MOUNTING.			
400357	12	87	Engine Mounting Cross Member Assy.	1	1	
FS.106/5			Engine Mounting Cross Member Set Pin.		2	-
C.8166A		88	Front Engine Mounting Rubber	1	1	
N.206K			Front Engine Mounting Rubber Nut	4	4	
3" Dia. Ext.			(31 1 C XX7 1	4	4	
C.8881		89×	Rear Mounting Rubber	2	2	
FB.106/14 3" B.S.F.			Rear Mounting Rubber Bolt	2	2	
GKN JA1			Rear Mounting Rubber Nut	2	2	
FS.105/6 %" B.S.F.			Set Pin: Mounting Rubber to Frame	4	4	
GKN1			Nut: Mounting Rubber to Frame	4	4	
W.105K			Washer: Mounting Rubber to Frame	4	4	
FS.106/5			Engine Mounting Cross Member to			
,	1		Frame Set Pin	4	4	
400361	1	90	Torque Arm Assembly	1	1	
C.9073		91	Torque Arm Reaction Buffer	2	2	1 6
N.104K			Torque Arm Reaction Buffer Nut	1	1	
N.204K	1		Torque Arm Reaction Buffer Locknut	1	1	
1" Dia. Ext.			Shakeproof Washer	2	2	
400360		92	Adjustment Plate Assembly	1	1	-
N.105K			Nut: Adjustment Plate to Frame	2	2	
W.105K	1		Washer: Adjustment Plate to Frame	2	2	

* metalastik# 17/223

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
-			INDEPENDENT SUSPENSION. BOTTOM WISHBONE ASSEMBLY.			
300144	9	1	Bottom Wishbone Rear Half Assembly	2	2	
C.9029		2	Bottom Wishbone Rear Half Bush	2	2	
300142		3	Bottom Wishbone Front Half Assembly	2	2	
300293 FS.106/6F		4	Tabwasher: Front Half to Rear Half Set Pin: Front Half to Rear Half	2 4	2 4	
C.5695		5		8	8	
Tecalemit HA39			Pivot Bushing Greaser: Bottom Wishbone	2	2	
		*				
			OUTER SUPPORT BRACKET ASSEMBLY.			
200169	1	6				
300162	-	6	Outer Support Bracket: Bottom Wishbone Pivot	4	4	
300448		7	Pivot Stop: Outer Support Brkt. Front	2	2	
300449		8	Pivot Stop: Outer Support Brkt. Rear	2	2	
300167		9	Bottom Arm Pivot Pin	2	2	
300450			Bottom Arm Pivot Pin Washer	2	2	
76 B.S.F. GKN. LA1	*		Bottom Arm Pivot Pin Nut	2	2	
			TOP ARM ASSEMBLY.			
300146		10	Top Arm and Bush Assembly	4	4	
C.9030	100	11	Top Arm Bush	4	4	
C.9434A		12	Top Arm Trunnion Assembly	2	2	
300171		13	Top Arm Connecting Pin	2	2	
400548 C.7893		14	Top Arm Connecting Pin Shim Top Arm Thrust Washer	as re	quired 4	
C.7966		16	Grease Retaining Washer	4	4	
C.8013		17	Dust Cap	4	4	
N.206K		18	Nut	4	4	
Tecalemit		194	Crease	2	2	
NA.5799 FB.106/12D		12A	Greaser Bolt: Top Arm Assy. to Top Bracket		6	
3" Dia. Ext.			Shakeproof Washer	6	6	
300335		19	Top Arm Adjusting Shim	as re	quired	
			TOP ARM SWIVEL PINS—			
			SWIVEL PIN.			
300166		20	Top Arm Pivot Pin	2	2	
C.5695		21	Top Arm Pivot Pin Bush	0	8	
300264		22	Top Arm Bushing Support Washer		4	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
N.407K 300197 300198 C.8015 C.7894 % B.S.F. GKN. PA1 C.8531 W.110K C.3814 C.7894 C.7965 FST.4/6	9	23 24 25 26 25A 27 28 29 30 30A	Top Arm Bushing Support Nut Swivel Pin, L.H. Swivel Pin, R.H. Bottom Arm Swivel Pin Top Arm Thrust Washer Nut: Bottom Arm Swivel Pin Oil Retaining Ring: Swivel Pin Washer: Swivel Pin Nut: Swivel Pin Thrust Washer: Swivel Pin Grease Retaining Washer Stud: Bottom Wishbone Outer Support Bracket to I.F.S. Crossmember Shakeproof Washer Nut	4 1 1 2 4 2 2 2 2 2 4 12 12 12	4 1 1 2 4 2 4 2 2 2 2 4 12 12	
			SWIVEL LEVERS.			
300152 300153 Woodruff No. 9 C.6447 C6433		31	Axle Swivel Lever, R.H. Axle Swivel Lever, L.H. Axle Swivel Key	1 1 2 2 2	1 1 2 2 2	
			SPRING BOTTOM CARRIER.			
400288 400289 N.107K 400374		32	Spring Bottom Carrier Assembly: R.H. Spring Bottom Carrier Assembly: L.H. Spring Bottom Carrier Nut Packing Piece	1 1 4 2	1 1 4 2	
			COIL SPRING TOP BRACKET— TOP ARM SUPPORT BRACKET— COIL SPRING.			
400330 FB.105/6 N.107K 300039 400567 FB.107/33D FB.107/6 400454 7" Dia. Ext.		33 34 35	Coil Spring Top Bracket Assembly Bolt: Coil Spring Top Bracket Nut: Coil Spring Top Bracket Coil Spring Insulation Rubber Coil Spring Bolt: Suspension to Frame (Long) Bolt: Suspension to Frame (Short) Locking Plate Shakeproof Washer	2 8 4 4 2 8 2 4 2	2 8 4 4 2 8 2 4 2	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			AXLE SWIVEL—HUB—DRUM.			
300316 300315	9	36	Axle Swivel Assembly: R.H Axle Swivel Assembly: L.H		1	
C.9029 Tecalemit HA39	-	37	Axle Swivel Bush Greaser	0	4 2	
300344 300345		38	Front Back Plate Assembly: R.H. Front Back Plate Assembly: L.H.	1	1	Complete with Bridge Pipe Assy. >H.2990A and Hose Assembly
FS.106/6 N.106K 3" Dia. Ext. 300438 C.7975 C.7976 300396 C.7891 C.7881 Hoff. MS10 Hoff. MS8 300397 300434 30044 CK.104/7 300436		39 40 41 42 43 44 45 46 47 48 49 50 51 52	Front Back Plate Set Pin Front Back Plate Nut Shakeproof Washer Front Hub Assembly Wheel Stud Wheel Stud Nut Front Hub Distance Piece: Inner Brg Oil Retaining Rings Oil Retaining Washer Inner Bearing Outer Bearing Bearing Spacer Nut: Axle Swivel Brake Drum Screw: Brake Drum to Hub Hub Cover Assembly	8 8 2 8 8 8 2 2 2 2 2 2 2 2 2 2 2 2 4 4 2 2 2 2	8 8 8 2 8 8 2 2 2 2 2 2 2 2 2 2 2 2 2 2	J H.3271H
			FRONT STABILISER BAR AND FIXINGS.			
400196 400345 C.8979 FS.106/5 §" Dia. Ext. C.8497 N.106K §" Dia. Ext.		53 54 54A 555	Bearing Rubber Bearing Rubber Stirrup Bearing Rubber Stirrup Set Pin Shakeproof Washer Link Nut for Link	. 1 . 2 . 2 . 4 . 4 . 2 . 4	1 2 2 4 4 2 4 4	
			FRONT SHOCK ABSORBERS AND FIXINGS.			
400146 400140		56 57	D 01 1 11 1 D' . D 1	. 2	2 4	Armstrong
400421		58	Top Mounting Rubber	4	4	AT.7/344 Armstrong AT.7/345

Part No.	PLATE No.	PLATE REF.	Discription	No. off R.H.D.	No. off	Remarks
400422	9	59	Top Mounting Rubber Retaining Washer	4	4	Armstrong
400423		60	Top Mounting Rubber Spacing Tube	2	2	AT.7/368 Armstrong
N.106K N.206K C.9786 C.9784 FB.107/17 76" B.S.F.		61 62 63	Fixing Nut: Top Spacing Tube Locknut: Top Spacing Tube Shock Absorber Bottom Bracket and Bolt Shock Absorber Bottom Bracket Pivot Bolt	2 2 2 2 2	2 2 2 2 2	AT.7/369
GKN. LB1 C.9785		64	Nut: Pivot Bolt	2 2	$\frac{2}{2}$	
½" B.S.F. GKN. NB1 400332 N.105K ½" Dia. Ext.		65	Nut for Bottom Bracket Anchor Bracket	2 2 8 8	2 2 8 8	
			FRONT BRAKE BACK PLATE. EXPORT SERVICE ONLY.			
Girling Nos. GB.40446 GB.40447 GB.40612 GB.40458 GB.40039 GB.39755			Front Back Plate: L.H. Front Back Plate: R.H. Snail Cam Snail Cam Bush Snail Cam Spindle Snail Cam Spring	2 2 2 2 2 2 2	2 2 2 2 2 2 2	
	done.		STEERING. FRONT CROSS TUBE (STEERING FIXING).			
400032 400039 §" int. dia. 400036 400037 400038	10	1 2 3 4	Front Cross Tube Assembly Front Cross Tube Fixing Bolt Shakeproof washer : Fixing Bolt Packing Washer (8G)	1 2 2	1 2 2	l off as required

STEERING

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			STEERING COLUMN.			
400545	10		Steering Column Assembly	1	1	
400546			Steering Column Assembly		1	
400085		5	Steering Drop Arm	1	_	
400084			Steering Drop Arm		1	
300112		6	Steering Wheel	1 1	1	
400026 400420		7.	Column Support Bottom Bracket Column Support Bottom	1	1	
FB.105/12			Column Support Bolt	1	i	
5" Dia. Ext.			Shakeproof Washer	ī	î	
400543		8	Steering Wheel Washer	1	1	
400542		9	Bridge Piece Assembly	1	1	
400540		10	Cap: Steering Wheel	1	1	
400539			Cap Assembly: Fixing Stud	1	1	
400273		11	Dash Steering Support Bracket	1	1	
400274		12	Dash Steering Support Bracket Washer	1	1	
ED 105/0		12A	Plate	1 4	4	
FB.105/8 C.3291		13	Bolt: Steering Support Bracket Bracket: Steering Column	2	2	
FB.105/17		13A		1	ī	
FB.105/15		13B	Bracket: Steering Column Bolt (Short)	ī	1	
N.105K			Nut	6	6	
5" Dia. Ext.			Shakeproof Washer	6	6	
		111				
			SERVICEABLE PARTS FOR			
			STEERING COLUMN AND BOX.			
SI-36		14	Outer Column and Box Assembly	1		
SI-37			Outer Column and Box Assembly		1	
S11-14		15	End Plate	1	1	
S3-53		16	Inner Column	1		
S3-54			Inner Column		1	
11-7-4		16A		1 7	1	
12-9-6		17	Ballrace Packing Washer	Cat	1 28	
17-1-1		17	Steel Balls	Set 1	1	
S7-18 S-19-2		19	Doglandhaft Pall Pag	1	1	
31-6-1		20	Rockershaft Ball Peg Circlip	1	i	
17-4-1		21	Rockershaft Steel Balls	Cat		
11-8-5		22	Rockershaft Nut	1	1	
12-8-22		23	Rockershaft Spring Washer	1	1	
27-8-12		24	Rockershaft Oil Seal	1	1	
12-8-20		25	Rockershaft Oil Seal Washer	1	1	
25-8-1	-	26	Rockershaft Adjusting Screw	1	1	
11-8-3		27	Rockershaft Adjusting Screw Locknut	1		
S10-10 S.10-12		28 29	End Plate Washer (Paper)		To suit Assembly	
0.10-14		49	End Plate Washer (Steel)		croscuintly	

STEERING

PART No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
S.12-15	10	30	Cover Plate	1		
S.12-16			Cover Plate	_	1	
10-3-5		31	Cover Plate Bolt	4.	4	
12-3-2			Cover Plate Spring Washer	7	7	
10-3-6		32	End Plate Bolt	3	3	
S.23-4		33	Adjustable Ball Race	2	2	
21-7-2		34	Oil Plug	1	1	
12-7-1		35	Oil Plug Washer	1	1	
19-8-17		36	Inner Column Bush (Plain)	1	1	
12-8-21			Inner Column Bush Washer	1	1	
12-6-1	- 1	37	Ball Peg Plain Washer	1	- 1	
12-6-2		38	Ball Peg Spring Washer	1	1	
12-8-18		39	Rockershaft Dished Washer	1	1	
31-12-3		40	Rockershaft Dished Washer Circlip	1	1	
			IDLER LEVER AND FIXINGS— TIE RODS.			
400021		41	Idler Lever Bearing Assembly	1	*	
400022			Idler Lever Bearing Assembly		1	
C.9030		42	Bush	2	2	
Tecalemit HA44	1		Greaser	1	1	
FS.105/6			Set Pin—Idler Lever Bearing Assembly			
5 # D: D			to Frame	2	2	
5" Dia. Ext.			Shakeproof Washer	2	2	
W.205K		40	Packing Washer	2	2	
300211	1	43	Idler Lever Spindle	1	$\begin{array}{c c} 1 \\ 2 \end{array}$	
C.7893		44	Thrust Washer	$\begin{bmatrix} 2 \\ 2 \end{bmatrix}$	2	
C.7966		45	Grease Retaining Ring	1	1	
300212		46	Retaining Washer	1	1	
GKN. JA.1		47	Nut: Idler Lever Spindle	1	1	
300200		48	T.11 T	î	*	
300199		40	Idler Lever		1	
W.109K			Washer	1	î	
%" B.S.F.			Trabilet			
GKN. PA.1	1	49	Nut	1	1	
300195		50	Tie Rod: Outer	$\hat{2}$	2	
300196		51	Tie Rod: Centre	1	1	
Tecalemit HA20			Greaser	6	6	
			TIE ROD SERVICEABLE PARTS.			
J.4670		52	Socket Assembly (R.H. Thread) Outer	2	2	
T 4671		F9	Rod	2	2	
J.4671		53	Socket Assembly (L.H Thread) Outer	2	2	
			Rod		-	

STEERING

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
KL.46006	10	54	Locknut: R.H	2	9	
KL.46036	10	55	T 1 . Y TY	2	2	
JE.621		56		2	2	
		57	-	2	2	
J.3177		31	Boot	2	2	
J.3184	1	F0	Boot Clip	1	2	
K.18807		58	Nut for Ball Stud	2 2	2	
J.4919		59	Socket Assembly: L.H. Centre Rod	_	2	
J.4920		60	Socket Assembly: R.H. Centre Rod	2	2	
KL.46006			Locknut: R.H	2	2	
KL.46036			Locknut: L.H	2	2	
J.3177		57	Boot	2	2	
J.3184			Boot Clip	2	2	
K.18807		58	Nut for Ball Stud	2	2	

REAR AXLE

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	Remarks
			REAR AXLE.			
400524	11		Rear Axle Assembly Complete	1		
400525			Rear Axle Assembly Complete	1	1	
400025		1	Rear Axle Case	1	1	
C.4858			Rear Balance Lever Bracket Bush	2	2	
FST.5/10		5	Differential to Axle Case Stud	7	7	
N.105K			Differential to Axle Case Nut	7	7	
FB.105/6			Differential to Axle Case Bolt	1	1	
5" Dia. Ext.			Shakeproof Washer	8	8	
C.6393			Differential to Axle Case Joint Washer	1	1	
C.8982		3	Rear Axle Case Drain Plug	1 1	1 1	
C.6310 C.7049		$\frac{4}{2}$	Oil Level Adaptor Cap	2	$\frac{1}{2}$	
400526		4	Oil Seal Rear Axle Casing Differential Complete	1	1	Ratio 4.875-1
400320			Differential Complete		1	8/39 Teeth
			SERVICEABLE PARTS. DIFFERENTIAL.			
C.9405 ND.		0	Pinion Housing	1	1	Moss 80309
C.9407 ND.		8	Pinion Housing	4	4	22460
C.9401 ND.		10	Locking Tabs	4	4	22473
C.9409 ND.		11	Differential Bearing	2	$\hat{2}$	16150×14
			2			-16184/4
C.9410 ND.		12	Bearing and Wheel Adjusting Shims	3	3	22473
C.9411 ND.		13	Differential Case	1 1	1	60401
C.9412 ND.	1	14	Differential Wheel	2	2	22403
C.9413 ND.	- 1	15	Differential Pinion	2	2	22462
C.9414 ND.	- 1	16	Differential Wheel Thrust Washer	2	2	22457
C.9415 ND.	-	17	Differential Pinion Thrust Washer	2	2	22461 22459
C.9416 ND.		18	Differential Cross Pin	$\begin{array}{c c} 1 \\ 1 \end{array}$	$\begin{array}{c c} 1 \\ 1 \end{array}$	22470
C.9417 ND. 400800	1	19 20	Differential Cross Pin Lock Pin Crown Wheel Ratio	i	i	40680/C
400801		21	n in' ' 0/20	i	î	40681/C
C.9420 ND.	-	22	Crown Wheel Bolt	8	8	20102/44
C.9421 ND.		23	Locking Tabs	3	3	22471
C.9422 ND.	- 1		Locking Tabs	1	1	22472
C.9423 ND.		24	Pinion Head Bearing	1	1	$2473 \times 4 - 2420/4$
C.9424 ND.		25	Pinion Tail Bearing	1	1	$1986 \times 4 - 1931/4$
C.9425 ND.		26	Pinion Mesh Adjusting Shim	3	3	22469
C.9426 ND.		27	Bearing Distance Collar	1	1	22456
C.9427 ND.		28	Shim for Bearing	7	7	22464
C.9428 ND.		29	Drive Flange	1	1	22458 21621
C.9252 ND.	1	30	Flange Lock Nut Slotted	$\begin{vmatrix} 1 \\ 1 \end{vmatrix}$	1 1	21620
C.9251 ND.		31	Plain Washer	1	i	250112
C.9429 ND. C.9667 ND.		32	O'I P'II DI	î	i	21245/5
2.3007 ND.	-	33	Oil Filler Plug	1	^	

REAR AXLE

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			REAR AXLE HOUSING.			
300049	11	34	Rear Hub and Shaft Assembly	2	2	
C.7975		35	Wheel Stud	8	8	
C.7976		36	Wheel Stud Nut	8	8	
300046		37	Rear Hub Bearing Housing	2	2	
Hoff. MS.11		43	Rear Hub Bearing	2	2	
300454		42	Rear Hub Oil Seal	2	2	
Γecalemit H.29		7.5	Greaser	2 2	2	
300044		46	Brake Drum	2	2	
CK.104/7			Brake Drum Countersunk Screw	4.	4	
C.8880		45	Axle Shaft Hub Bearing Nut	2	2	
C.8878		44	Axle Shaft Hub Bearing Lockwasher	2	2	
300111		58	Rear Axle Back Plate Assembly	2	2	
FST.6/9		38	Back Plate Fixing Stud	8	8	
N.106K		39	Back Plate Fixing Nut	8	8	
3" Dia. Ext.	1	40	Shakeproof Washer	8	8	

BRAKES

No.	PLATE No.	PLATE REF.	Description	No. off	No. off	Remarks
			BALANCE LEVERS—BRAKE OPERATING RODS.			
C.8509	11	47	Rear Balance Lever Assembly	1	1	
C.4858			Rear Balance Lever Bush	2	2	
C.4883		48	Dust Cover	ī	ī	
C.8508		50	Balance Lever Pin	î	i	
N.405K		51	DI T D' M	i	î	
W.105K		91	TIT I DI I CO	i	1	
N.406K		52	NI DI I D'	-	_	
		34	Nut: Balance Lever Pin	1	1	
W.106K	1	40	Washer: Balance Lever Pin	1	1	
C.7980		49	Swivel: Rear Balance Lever	1	1	
N.105K			Nut: Rear Balance Lever	1	1	
W.105K			Washer: Rear Balance Lever	1	1	
½" Dia. Ext.			Shakeproof Washer	1	- 1	
100055		54	Brake Operating Rod: N.S	1	1	
00054		53	Brake Operating Rod: O.S	1	1	
C.5009			Rubber Tube for Rod	1	1	
C.4873		55	Clevis Joint (Small)	2	2	
V.104K			Fork End and Clevis Joint Locknut	4	4	1000
C.4889		56	Clevis Pin (Short)	$\hat{2}$	$\hat{2}$	
V.104K		57	Washer for Clevis Pin	2	2	
			THE STATE OF CHARLES AND THE STATE OF THE ST			
			SERVICEABLE PARTS.		, 1	
			FRONT BRAKES.			
00664	9	66	Back Plate Assembly: L.H	1	1	-
00004						
	,		Dack Plate Assembly: K.H			
00684	,		Back Plate Assembly: R.H	$\begin{vmatrix} 1 \\ 2 \end{vmatrix}$	$\frac{1}{2}$) Home
00684 00669	,	67	Brake Shoe and Lining: L.H	2	2	Home Replacement
00684 00669	,					Replacement
00684 00669 00685	7		Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H	2 2	2 2	Replacement only
00684 00669 00685	7		Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H	$\begin{bmatrix} 2 \\ 2 \end{bmatrix}$	2 2 2	Replacement only Export
00684 00669 00685 00688 00682	7		Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H	2 2 2 2	2 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683	7	67	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe Lining only	2 2 2 2 4	2 2 2 2 4	Replacement only Export
00684 00669 00685 00688 00682 00683 00670	7	68	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return	2 2 2 2 4 4	2 2 2 2 4 4	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670	7	68 69	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe	2 2 2 2 4 4 2	2 2 2 2 4 4 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671	7	68 69 70	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long	2 2 2 2 4 4 2 2	2 2 2 4 4 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673	7	68 69	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: 7" dia. L.H.	2 2 2 4 4 2 2 2 2	2 2 2 4 4 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673	7	68 69 70 71	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: \frac{7}{8}" dia. L.H. Wheel Cylinder Assembly: \frac{7}{8}" dia. R.H.	2 2 2 2 4 4 2 2	2 2 2 4 4 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673 00686 00674	2	68 69 70	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: 7" dia. L.H. Wheel Cylinder Assembly: 7" dia. R.H. Wheel Cylinder Body and Abutment	2 2 2 4 4 2 2 2 2	2 2 2 4 4 2 2 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00670 00671 00672 00673 00686 00674	7	68 69 70 71	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: 7" dia. L.H. Wheel Cylinder Assembly: 7" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H.	2 2 2 4 4 2 2 2 2	2 2 2 4 4 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673	7	68 69 70 71	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: ½" dia. L.H. Wheel Cylinder Assembly: ½" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H. Wheel Cylinder Body and Abutment	2 2 2 2 4 4 2 2 2 2 2	2 2 2 4 4 2 2 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673 00686 00674	7	68 69 70 71 72	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: 7" dia. L.H. Wheel Cylinder Assembly: 7" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H Wheel Cylinder Body and Abutment Strip: R.H	2 2 2 4 4 2 2 2 2	2 2 2 4 4 2 2 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673 00686 00674	7	68 69 70 71	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: ½" dia. L.H. Wheel Cylinder Assembly: ½" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H. Wheel Cylinder Body and Abutment	2 2 2 2 4 4 2 2 2 2 2	2 2 2 4 4 2 2 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673 00686 00674	7	68 69 70 71 72	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: 7" dia. L.H. Wheel Cylinder Assembly: 7" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H Wheel Cylinder Body and Abutment Strip: R.H	2 2 2 2 4 4 2 2 2 2 2 2	2 2 2 4 4 2 2 2 2 2 2 2	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673 00686	7	68 69 70 71 72	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: \frac{7}{8}" dia. L.H. Wheel Cylinder Assembly: \frac{7}{8}" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H Wheel Cylinder Body and Abutment Strip: R.H Wheel Cylinder Spring Wheel Cylinder Air Excluder	2 2 2 4 4 2 2 2 2 2 2 4	2 2 2 4 4 2 2 2 2 2 2 2 4	Replacement only Export Replacement
00684 00669 00685 00688 00682 00683 00670 00671 00672 00673 00686 00674	7	68 69 70 71 72	Brake Shoe and Lining: L.H Brake Shoe and Lining: R.H Brake Shoe and Lining: R.H Brake Shoe and Lining: L.H Brake Shoe and Lining: L.H Brake Shoe Lining only Spring Return Sub-Assembly Bridge Pipe Hose Assembly: 14" long Wheel Cylinder Assembly: \frac{7}{8}" dia. L.H. Wheel Cylinder Assembly: \frac{7}{8}" dia. R.H. Wheel Cylinder Body and Abutment Strip: L.H Wheel Cylinder Body and Abutment Strip: R.H Wheel Cylinder Spring	2 2 2 4 4 2 2 2 2 2 2 2 4 4 4 2 2 2 4 4 4 4	2 2 2 4 4 2 2 2 2 2 2 2 4 4 4 2 2 2 4 4 4 4 2 4 2 4	Replacement only Export Replacement

BRAKES

Part No.	PLATE No.	PLATE REF.	Description		No. off R.H.D.	No. off L.H.D.	REMARKS
100680	9		Wheel Cylinder Bleed Screw		2	2	
00681					$\frac{1}{2}$	2	
100731			Wheel Cylinder Ball: $\frac{5}{32}$ dia.		2	2	,
400732			Wheel Cylinder Spring Washer	• •		8	
100733			Wheel Cylinder Nut: 4" ANF	_*	8	8	
			SERVICEABLE PART REAR BRAKE.	rs.			
100600	11	50	Daals Dlate		9	2	
100689	11	58	Back Plate		2	4.	
400690			Rear Plate Steady		4	-	
100691			Rear Plate Felt Bush		4	4	-
100727			Rear Plate Lock Nut		4	4	Home
400692		59	Brake Shoe and Lining		4	4	Replacement
400698			Brake Shoe and Lining		. 4	4	Export
400699		-	Brake Lining only		4	4.	Replacement
C.4927		65	Dust Cover		2	2	Jonly
400693			Adjuster Unit		2	2	
C.4942		61	Adjuster Unit Housing		2	2	
C.4932A		63	Adjuster Link: L.H		2	2	1
C.4932		-	Adjuster Link: R.H		2	2	
C.4925		62	Adjuster Wedge		2	2	
400728		1 -	Adjuster Unit Set Bolt		4	4	
400729			Adjuster Unit Washer		4	4	
400694		1	Expander Unit		. 2	2	
400695		64	Expander Housing		$\begin{bmatrix} \cdot \cdot \\ \cdot \cdot \end{bmatrix}$	2	
C.4945		J-1	Expander Tappet		4	4	+:
400730	- 1		Expander Tappet Split Pin			4	1
C.4929			Expander Roller		4	4	
-		-	_ ^ . ~			2	
C.4944		66			0	2	
C.4933		00	Expander Draw Link		0	2	
C.4941		67	Expander Draw Link Pin		0		
C.4943		67	Expander Draw Link Socket		2	2	1
C.4928			Expander Unit Washer (Zinc)		4	4	
400726	1 1 5		Expander Unit Washer (Thack	teray)	4	4	
400696			Expander Unit Nut		4	4.	
400697		60	Spring: Shoe Return		4	4	1

PROPELLER SHAFT

PART No.	PLATE No.	PLATE REF.	Description	No. off R,H,D.	No. off L.H.D.	Remarks
			PROPELLER SHAFT.			
C.4820	11		Propeller Shaft	1	1	
FB.105/7F	1			4	4	
N.105K			Propeller Shaft Bolt Propeller Shaft Nut	4.	4.	
C.6304			Propeller Shaft Lockwasher	4	4	
			SERVICEABLE PARTS— PROPELLER SHAFT.			
K.1-2-39	1	69	Flange Yoke	2	2	
K1-3-GB.18		70	Sleeve Yoke Assembly	1	1	-
K1-5-GB.58	1	71	Tournal Assembly	2	2	
K1-6-GB.28		72	Needle Bearing Assembly	8	8	
94-GB.1598			Lubricator (Journal)	2	2	
K1-7-GB.19		73	Snap Ring	- 8	8	
K5-L.1			Unit Package (Consisting of Journal		-	
			Assembly, 4 Bearing Race Assemblies			
71 140D 10			and 4 Snap Rings (less Lubricator)	2	2	
K1-14GB.19		74	Dust Cap	1	1	
K1-15-GB.13	1		Steel Washer	1	1	
K1-16-GB.13	1	7-	Cork Washer	1	1	
GB.112-4331	1	75	Tubular Shaft Assembly	1	1 -	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			FRAME ASSEMBLY.			
100417	12	1	Frame Assembly	1		
100172	12	•	Frame Assembly		1	
400114		2	Master Cylinder	1	1	
F.105/20	,		Master Cylinder Fixing Bolt	3	3	
5" Dia. Ext.			Shakeproof Washer	2	2	
100492		3	Master Cylinder Supply Tank Complete	1	1	
300385		4	Master Cylinder Supply Tank Clip	1	1	
C.6312		5	Brake Pedal Return Spring	1	1	
W.205K			Washer: Master Cylinder Fixing Bolt	1 3	$\begin{vmatrix} 1 \\ 3 \end{vmatrix}$	
C.6654 RH.103/8			Pipe Clip Screw: Pipe Clip to Frame	3	3	
N.100K	1		Nut: Pine Clip to Frame	3	3	
3″ Dia. Ext.			Nut: Pipe Clip to Frame Shakeproof Washer Pipe Clip	3	3	
C.6654A			Pipe Člip	1	1	
FS.105/5	-		Setscrew: 3-Way Piece to Frame	1	1	
5" Dia. Ext.			Shakeproof Washer	1	1	
N.104K			Shakeproof Washer Nut: Supply Tank to Column	1	1	
¹ " Dia. Ext.			Shakeproof Washer	- 1	1	
	1					
			SERVICEABLE PARTS.			
			MASTER CYLINDER SUPPLY			
			TANK.			
400711		3	Supply Tank (less Clip and Fixings)	1	1	
400712		3	Supply Tank (less Clip and Fixings) Supply Tank Body and Cap	i	î	
400713			Supply Tank Cap	î	i	
400714			Supply Tank Washer	1	1	
400715			Supply Tank Adaptor	1	1	
400716			Supply Tank Nut	1	1	
400735			Supply Tank Washer	1	1	
400717			Supply Tank Gasket	1	1	
400718			Clip: Supply Tank	1 1	1	
400719 400720			Nut: Supply Tank Bolt: Supply Tank	1	1	
400120			Bolt: Supply Tank	1	1	
			MASTER CYLINDER (1) P. G.	8.)		
			SERVICEABLE PARTS.			
400700		6	Master Cylinder Body	1	1	
400701		7	Master Cylinder Body	-	1	
400702		8	Master Cylinder Plunger		i	
400703		9	Master Cylinder Plunger Master Cylinder Plunger Return Spring	i	î	
400704	1	10	Master Cylinder Seal	1	1	
400705		11	Master Cylinder Seal Recuperating	1	1	
		12	Master Cylinder Seal Retainer	1	1	1000
400706 40 07 07		13	Master Cylinder Push Rod Assembly		1	

Part No.	PLATE No.	PLATE REF.	Description	No. off	No. off	Remarks
~400708 ~400709 ~400710 ~400734	12	16 17 18 19	Master Cylinder Boot	1 1 1 1	1 1 1	
			REAR SUSPENSION—SHOCK ABSORBER.			
400053 C.5695 C.5603 C.5604 C.6399 C.6431 C.5572 C.5743 N.107K 400452 C.6606 C.6574 N.106K N.206K 400112 400111 FS.106/6 N.106K %" Ext. Dia. 400408 400409 C.8497 FB.106/7 N.106K C.6395 %" Dia. Ext.		20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35	Rear Road Spring Bush Rear Road Spring Bush Front End Rear Spring Bolt Front End Rear Spring Tabwasher Rear Spring Shackle Plate Outer Assy. Rear Spring Shackle Plate Inner Assy. Rear Spring Shackle Plate Tabwasher Rear Spring Shackle Plate Tabwasher Rear Spring Shackle Plate Tabwasher Rear Spring Clip Rear Spring Clip Rear Spring Clip Strap Rear Spring Clip Nut Rear Spring Clip Nut Rear Spring Clip Locknuts Rear Spring Rebound Buffer (Rubber and Plate) Rear Axle Bump Rubber and Strap Rear Axle Bump Strap Set Pin Rear Axle Bump Strap Nut Shakeproof Washer Rear Shock Absorber: R.H. Rear Shock Absorber Link Rear Shock Absorber to Support Bolt Rear Shock Absorber Link Nut Shakeproof Washer	2 12 2 2 2 2 2 2 2 4 4 2 4 8 8 8 2 2 4 4 4 1 1 2 4 4 4 1 1 2 4 4 4 4 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	2 12 2 2 2 2 2 2 2 4 4 2 4 8 8 8 2 4 4 4 1 1 2 4 4 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	
400082		38	BRAKE DETAILS. Brake Pedal Assembly	1		
C.7967 C.5669A N.107K K.6723 400077 400073		39	Brake Pedal Bush Brake Pedal Rod and Pad Assembly Brake Pedal Nut Brake Pedal Rubber Tread Brake Pedal Support Pin Brake Pedal Support Pin Tabwasher Brake Pedal Support Pin Tabwasher	2 1 2 1 1 1		

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			HYDRAULIC PIPES AND FITTINGS.			
400497	12		Hydraulic Pipe Assembly: R.H. Front to Tee Piece	1	1	$23\frac{1}{2}''$ long
400721		40	Hydraulic Pipe Assembly: L.H. Front	1	1	
400724		41	to Tee Piece Hydraulic Pipe Assembly: Master Cyl.		1	50" long
400722			to Tee Piece Hydraulic Pipe Assembly: Master Cyl.	1		12½″ long
400494		42	to Tee Piece Hydraulic Pipe Assembly: Master Cyl.		1	22½″ long
400723		- '	to Supply Tank Hydraulic Pipe Assembly: Master Cyl.	1		26½" long
400506			to Supply Tank	2	$\frac{1}{2}$	27½" long
400499			Banjo: Master Cyl. to 3-Way Piece	1	1	
400501	-		Banjo Bolt: Master Cyl. to 3-Way Piece	1	1	
400504			Gasket: Master Cyl. to 3-Way Piece	1	1	
400505	-		Gasket: Master Cyl. to 3-Way Piece	1	1	
400491			Tee Piece	1	1	
3" Dia. Int.			Shakeproof Washer	2	2	
400500		-	Banjo: Master Cylinder to Supply Tank	1	1	
400502	-		Banjo Bolt: Master Cylinder to Supply			
400503		4.	Tank Cylinder to Supply	1	1	
400303	1.		Tank	1	1	
400505	-		Gasket: Master Cylinder to Supply			
			Tank	1	1	
			BRAKE REVERSING LEVER ASSY.			1
			BALANCÉ LEVER, ETC.			
400072		43	Brake Reversing Lever Assembly	1	-	1
C.8133			Brake Lever Bush	2		
400067			Reversing Lever Pin	1	1	
400069			Reversing Lever Tabwasher	1	1	
400337		4.4.	Balance Lever	2	2	
W.106K	-	_	Balance Lever Spacing Washer	2	1	
400338			Balance Lever Pin	ī	î	
400341		45	Fork End Assembly	i	i	
C.8670		1	Fork End Pin	î	i	
W.105K			Fork End Washer	1 î	Î	
400342		46	Brake Rod Balance to Reverse Lever	i	i	
C.6312		47	Reversing Lever Return Spring	i	i	
400469		48	Reversing Lever Return Spring Anchor	2	2	
F.105/4		10	C. A. D C	1	2	
N.105/4 N.105K			Nut: Spring Anchor to Frame	1		
,		1	The state of the s	-		

PART No.	PLATE No.	PLATE REF.	Description	No. off R,H,D.	No. off L.H.D.	Remarks
16" Dia. Ext. 300325 N.105K C.6451 W.105K 400092 Lucas 54C RH.103 8 N.100K 36" Dia. Ext.	12	49	Shakeproof Washer Slip Link Assembly Lock Nut: Fork Ends Clevis Pin Clevis Pin Washer Stop Light Switch Spring Anchor Stop Light Switch and Spring Stop Light Switch Fixing Screw Stop Light Switch Fixing Nuts Shakeproof Washer	1 1 3 2 1 1 1 2 2 2 2	1 3 2 1 2 1 2 2 2 2	
			HAND BRAKE LEVER ASSEMBLY HAND BRAKE ASSEMBLY.			
400079 400078 Tecalemit H.29 400073		50	Handbrake Lever Assembly Handbrake Lever Support Pin	1 1 1	1 1	
C.4226		51	Handbrake Complete with Fixing Bolts and Cable C10322	1	1	
C.6782 FS.104/4 N.104K L' Dia. Ext.			Hand Brake Support Bracket	1 1 1 1	1 1 1	
400076 300325		52 53	Brake Rod: Handbrake to Reversing Lever Slip Link Assembly	1 1	1	
C.6506 C.6451 W.105K		54	Fork End	$\frac{1}{2}$	1 2 2	
C.6312 C.6636		55 56	Brake Pedal Return Spring Brake Pedal Return Anchor	1	1	
			BRAKE COUPLING LEVER—BRAKE RODS AND FITTINGS.			
300331 C.4858 C.5684		57	Brake Coupling Lever Assembly Brake Coupling Lever Bush Brake Coupling Lever Pin	1 2 1	$\begin{array}{c} 1 \\ 2 \\ 1 \end{array}$	
W.105K N.405K 400093		58	Brake Coupling Lever Pin Washer Brake Coupling Lever Pin Nut Brake Rod: Reversing Lever to Coup-	1	1	
100094		59	ling Lever Brake Rod: Coupling Lever to Rear Axle	1	1	
300329 C.4873		60 61	Brake Rod Fork End Brake Rod Fork End	1 3	3	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	Remarks
C.4867 C.6451 C.4889 W.105K W.104K N.104K C.5009	12	62	Universal Clevis Joint Clevis Pin Clevis Pin Clevis Pin Clevis Pin Washer Clevis Pin Washer Locknut for Brake Rods Rubber Tube for Brake Rod	1 4 2 1 4 4	1 4 2 1 4 4 1	
400189 C.7967 400195 400321 N.107K C.6723 400191 Tecalemit NA.5792/1			BRAKE AND CLUTCH PEDAL ASSEMBLIES AND SHAFT, L.H.D. Brake Pedal Assembly Brake Pedal Bush Clutch and Brake Pedal Shaft Brake Pedal Rod Assembly Brake Pedal Nut Brake Pedal Rubber Tread Clutch Pedal Assembly Greaser		1 2 1 1 2 1 1	
C.5669A N.107K C.6723 400476 C.7967 C.6445 W.205K FS.105/4 -56" Dia. Ext. C.7967 400547 400395			CLUTCH PEDAL ROD & BRAKE. OPERATING LEVER ASSEMBLIES L.H.D. Clutch Pedal Rod Assembly Clutch Pedal Rubber Tread Brake Operating Lever Assembly Brake Operating Lever Bush Pedal Shaft Spacing Washer Pedal Shaft Retaining Washer Pedal Shaft Retaining Set Pin Shakeproof Washer Pedal Shaft Support Bush: Sidemember Pedal Shaft Support Bush: Sub-Frame Clutch Operating Lever Assembly		1 2 1 1 2 or 3 1 1 1 1 2	As required
Tecalemit NA.5701 No. $5 \times 1\frac{1}{4}''$ 400300 C.8133 C.8141 C.6349 C.6403 N.205K W.206K			Greaser Taper Pin Brake Reversing Lever Assembly Brake Reversing Lever Bush Clutch Pedal Coupling Rod Assembly Clutch Pedal Coupling Rod Spring Spherical Nut Locknut Washer		1 2 1 2 1 1 1 3	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
C.6451	12		Clevis Pin		. 1	
W.105K			Washer		1	
FS.105/8			Pedal Stop Plate Set Pin		1	
N.105K 400295				-	1	
400295			Handbrake Lever Assembly		1	
		- 1	EXHAUST SYSTEM.			
400158		64	Silencer Assembly Complete with Front			
0.4110		6=	and Rear Exhaust Pipe	1	1	
C.4118		65	Silencer Barrel Assembly	1	1	
400156 400157		66	Front Exhaust Pipe	1	1	
C.2676		67 68	Rear Exhaust Pipe	1	1	
C.5839		69	Silencer Clip Support	1	1	1
C.5695		70	Silencer Clip Support Silencer Clip Support Bush	î	î	
FB.105/8		71	Silencer Clip Support Bolt	i	î	
N.105K		••	Silencer Clip Support Nut	î	ī	
5" Dia. Ext.		İ	Shakeproof Washer	1	1	
C.5837		72	Silencer Support Brackets	2	2	
C.5840		73	Silencer Support Bracket Pin	1	1	
W.205K			Silencer Support Bracket Washer	1	1	
N.405K			Silencer Support Bracket Nut	1	1	
FS.105/5			Silencer Support Bracket to Frame Set	2	2	
N.105K			Silencer Support Bracket to Frame Nut	2	2	
5" Dia. Ext.			Shakeproof Washer	2	2	
C.8361		74	Front Exhaust Pipe Gasket	1	1	
N.105BR			Exhaust System to Manifold Nut	4	4.	
5" Dia. Ext.		1	Shakeproof Washer	4	4	
C.7033		75	Rear Êxhaust Pipe Clip	1	1	
FB.105/4	-		Rear Exhaust Pipe Clip Set Pin	1	1	*
N.105K			Rear Exhaust Pipe Clip Nut	2	2	
FB.105/6			Rear Exhaust Pipe Clip Bolt	1	1	
			PETROL TANK ASSEMBLY PIPES AND FITTINGS.			
400426	-	76	Petrol Tank Assembly	1	1	
C.6421		1	Petrol Tank Support Bracket: N.S	1	1	
C.6422	- 1		Petrol Tank Support Bracket: O.S	1	1	
C.6423			Petrol Tank Support Bracket: Rear	1	1	
C.6635			Drain Plug	1	1-	(
C.6350	-		Petrol Tank Washer: Drain Plug	1	1	
Jaeger TA.110	- 1	77	Petrol Gauge Complete with Joint	1	1	
RH.103/6	-	-	Petrol Gauge Fixing Screw	6	6	
C.7084			Petrol Tank Fixing Screw Washer	6	6	

Part No.	PLATE No.	PLATE REF.	Description	No. off	No. off	Remarks
C.3727 W.206K C.7232 FB.106/8 400428 400424 C.6654 RH.103/8 N.100K # Dia. Ext. B.7571 C.9097 C.6876 C.9053 C.6224	12	78 79 80 81 82	Petrol Gauge Mounting Rubber Petrol Tank Mounting Washer Petrol Tank Mounting Tabwasher Petrol Tank Mounting Bolts Petrol Pipe Assembly Tank to Pump Flex: Pump to Carburettor Petrol Pipe Clip Petrol Pipe Clip Screw Petrol Pipe Clip Nut Shakeproof Washer Filler Neck Grommet Filler Neck Extension Assembly Filler Cap Filler Neck Extension Hose Filler Neck Extension Hose Filler Neck Extension Hose Clip	3 3 3 1 1 6 5 5 6 1 1 1 2	3 3 3 1 1 6 5 6 1 1 1 2	
			PETROL PUMP AND FIXINGS.			
C.6244 FST.4/16	13		Petrol Pump Complete with Unions Petrol Pump Stud	1 2	1 2	Up to Chassis 4AD 1001U
FST.4/11 C.6708 C.6709 400751			Petrol Pump Stud Petrol Pump Packing Piece Petrol Pump Plate Petrol Pump Packing Piece (Plywood)	2 1 1 2	2 1 1 2	After 4AD 1001U
N.104K W.204K			Petrol Pump Stud Nut Petrol Pump Stud Washer	2 2	2 2	4AD 1001U
		-	SERVICEABLE PARTS FOR PETROL PUMP.			
405 839 840 847 868 869 878 887 4080/1 4081/1 4082/1 1416 1421 1422		1 2 3 4 5 6 7 8 9 10 11 12 13 14	Fibre Washer: ¼" Gas Inlet Union Valve Disc Spring Retainer Clip: Valve Disc 5 BA Brass Screw for Spring Blade 5 BA Spring Washer: Spring Blade Screw Moulded Terminal Knob 2 BA Brass Terminal Nut Gas Double Ended Inlet Union Body Casting (Aluminium) Plate Casting (Aluminium) Gasket Valve Cage Filter Plug Outlet Union	1 2 1 1 1 1 2 1 1 1 1 1 1 1 1	1 2 1 1 1 1 2 1 1 1 1 1 1	

PART No.	PLATE No.	PLATE REF.	Discription	No. off	No. off	Remarks
AS.1430 1433 1435 AS.1438 1442 1449 4083 1455 1456 1459 AS.1464 1466/12v 1467 1468 1479 1661 1662 4084 AS.1697 1863	13	15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34	Solenoid Complete in Housing—12 volt Roller: Diaphragm Rocker Arm Pin Contact Set (Single Point) Earth Return Fibre Washer Filter and Outlet Union Armature Spring Long Coil Housing Fixing Screw 5 BA Terminal Tag 2 B.A. Terminal Tag 2 BA End Plate Moulding Fixing Screw Filter End Cover Cap (Black) 12v. End Plate Moulding Terminal Screw . Fibre Washer: Valve Cage Brass 2 BA Cone Nut for Lead Ring Lead Contact Ring for Terminal Long Earth Stud for Aluminium Body Diaphragm and Spindle Assembly 2 BA Spring Washer: Terminal Nut and End Plate Washer	1 11 1 2 1 5 1 4 2 1 1 1 1 1 1 1 1	1 11 1 2 1 5 1 4 2 1 1 1 1 1 1	
400167 C.9227 C.8307 C.10277 C.6222 400346 C.6223 C.6860 76" B.S.F. GKN. LA1 400580 400581 N.104K 1" Dia. Ext. AC1571315	14	1 2 3 4 5 6 7 8 9	RADIATOR AND CONNECTIONS, ETC. Radiator Block Assembly less Drain Tap Radiator Drain Tap	1 1 1 2 1 2 4 2 1 1 2 2 1	1 1 1 2 1 2 4 2 1 1 2 2 1	will Service C.8307
			ROAD WHEELS.			
400440 400416 C.9748	12	83 84	Road Wheels, Tyres and Tubes, 5.00×16 Road Wheels Wheel Discs	5 5 4	5 5 4	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	REMARKS
			ELECTRICAL EQUIPMENT INSTRUMENTS.			
eger P.112			Combined Ammeter, Oil and Petrol			
			Gauge with Lucas Ammeter C.Z.20	1	1	
neger			Ditto	1	1	Metric
34006A			Lighting Switch PLC.6 Type L.106	1	1	
998462				1	1	
B.5468C			Panel Connector Ignition Switch Lock and Keys Ignition Warning Light	1	1	
031069A			Ignition Warning Light	1	1	
14124			Panel Light Switch	1	1	
764401B/						
764428B			Starter Switch and Coupling ST.19/1	1	1	
.218			Speedometer Cable 5 ft. 7 in	1		
.225			Speedometer Cable 5 ft		1	
B.104/10			Speedo. Pinion Guide to Cable Bolt	1	1	
" Dia. Ext.			Shakeproof Washer	1	1	
31260			Hand Dipper Switch	1	$\frac{1}{2}$	
052626			Stop Tail Lamp ST.488	2	1	
069213E			Horn HF.1235	2	2	
S.104/4			Horn to Bracket Set Pin	2	2	
I.104K " Dia. Ext.			Horn to Bracket Nut	2	2	
732687H			Windscreen Wiper CW1 Type BP73	1	ī	
733480			Windscreen Wiper Arm and Blade Assy.:	_	1	
100400		-	L.H	1	1	
733479			Windscreen Wiper Arm and Blade Assy. :			
			R.H	1	1	
76216A			Horn Push HP.19	1	1	
aeger SS.579	-		Speedometer	1	1	
aeger SS.579K			Speedometer	1	1	Metric
C.5068G		*	Choke Control BP/14C/K48		1	
C.9577			Starter Control BP/95/K49		1	
186111			Battery Fixing Screw		2	
4011500F			Battery CTW7A		1	
524887						
2.9117			Headlamp Bracket: L.H.		1	
2.9118			Headlamp Bracket: R.H.	$\frac{1}{2}$	$\frac{1}{2}$	
C.6700			Headlamp Grommet	-	_	1
B.105/6 J.105K			Headlamp Bracket Bolt	1	4 4	
			Headlamp Bracket Nut	1	4	
6" Dia. Ext. 2.6637			Shakeproof Washer Sidelamp Grommet through Valance		2	
3.6203			0:11	0	2	
C.5509			0:11 777 1 0	0	2	
37138			Control Box RB.106		1	1
37132D			Fuse Unit SF.106	1	i	
			*Lucas Accessories			1
			*			

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	REMARKS
*052448D			Number Plate Lamp 467A	1	1	
3" × 4 BA			Cheese Head Screws (Stop Tail Lamp)	6	6	
*820220			Harness Cable	i	i	
*860459			Petrol Pump Feed Lead	î	î	
*860458			D. ID TILT	1	î	
*859426A				1	+	
*859426B			Screen Wiper Cable Screen Wiper Cable	1	1	
			OFDAMORADIE DADEO MIDIO			
			SERVICEABLE PARTS — WIND- SCREEN WIPER.			
				R.H.D.	L.H.D.	
*732480			Wiper Motor	1	1	
*730467			Cover Assembly	1	1	
*730388			Brush Set	1	1	
*733108				1	i	
*735168		- 3	Armature Arm: R.H	î	ī	
*735167			Arm: L.H	î	î	
*732693			D 0 1:	î	î	
*727707			TTT TO TO TO	2	2	
*731721				1	1	
. (31/21			Bearing Set	1	1	
			HEADLAMPS.			
*056290A			Headlamp S.700, Bulb No. 300 DipLeft	2		Service No.
			For Cyprus, Iceland, Nyasaland, Sudan,			50869A
			Tanganyika, Aden, Bermuda, Jamaica,			Up to Chassis
			Malta, Uganda, Hong-Kong, Shanghai,			4ÅD 29U
			Malay, Straits Settlements, Australia,			
-	i	- 1	South Africa, New Zealand, Burma,		P	
	i	- 1	India.			
056302A	- 1	1	Headlamp S.700 Bulb No. 301, Dip Right			Service No.
00000211			For Syria, Algeria, Egypt, Iran, Suad			50869A
1 -			Arabia, Chile, Spain, South America,			Up to Chassis
		-	Eritrea, Ethiopia, Israel, Gibraltar,			4AD 29U
						411D 27 C
			Canada, Denmark, Greece, Austria,			
			Netherlands, East Indies, Lebanon,	-	-	
056207			Sweden.		2	Comica Ma
056307			Headlamp S.700, Bulb No. 350, Dip		2	Service No.
			Vertical			50869A
			For Finland, Holland, Hungary, Norway,			Up to Chassis
	1		Switzerland, Germany, Belgium,			No. 4AD 29U
			Czecho-Slovakia, Italy, Portugal.			
056308	1	-	Headlamp S.700, Bulb No. 301, Dip Right		2	Service No. 5087
	-		For U.S.A., Ecuador (not California)			Up to Chassis
						4ÅD 29U
			*Lucas Accessories			

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			Headlamp S.700, No Bulb, Dip Vertical (3 Pin Adaptors)		2	Service No. 50876A Up to Chassis
*056290A			Headlamp S.700, N.S. Double Filament, Dip Left, Bulb No. 300	1		4AD 29U Service No. 50869A Up to Chassis 4AD 29U
*056291A	-		Headlamp S.700, O.S. Single Filament Bulb No. 162		1	Service No. 50870A Up to Chassis 4AD 29U
			Headlamps S.700, Body and Rim only, Plus Special Leads 553724, Cardboard Filling, Disc 553712 and Spring Clips <i>For</i> California only.		2	
*056487 *056489			Headlamp S.700, Block Type Lens Bulb No. 354, RHD, Double Dip Left With Silvered Reflectors With Aluminised Reflectors For Australia, British East Africa, British West Africa, Ceylon, Channel Islands, Cyprus, Gibraltar, Hong-Kong, India, Irish Republic, Malta, Mauritius, New Zealand, Pakistan, S. Rhodesia, Union of S. Africa, Great Britain.	2		From Chassis 4AD 30U
*056308A *056490			Headlamp S.700, Block Type Lens, Bulb No. 301, LHD, Double Dip Right With Silvered Reflectors With Aluminised Reflectors For Argentine, Bermuda, Brazil, British West Indies, Canada, Iran, Iraq, Israel, Siam (Thailand), U.S.A., Uraguay, Venezuela.		2	From Chassis No. 4AD 30U
*056488 *056491			Headlamp S.700 Block Type Lens, Bulb No. 360, LHD, Double Dip Centre With Silvered Reflectors With Aluminised Reflectors For Belgium, Canary Islands, Denmark, Dutch East Indies, Egypt, Finland, Germany, Morocco, Netherlands, Norway, Portugal, Spain, Switzerland, Sweden, Turkey.		2	From Chassis No. 4AD 30U
			*Lucas Accessories			

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			SERVICEABLE PARTS S.700 HEADLAMPS.			•
*553248 *553921 *553774 *504665 *859696 *552915 *522906			Rim Assembly Light Unit Light Unit Wire: Light Unit Fixing Adaptor Gasket Body Excluder: Rubber Bulb as Fitted	2 2 2 2 2 2 2 2 2 2	2 2 2 2 2 2 2 2 2 2	Up to Chassis No. 4AD 29.U
			SERVICEABLE PARTS S.700 BLOCK TYPE LENS HEADLAMP			
*553935 *552912 *552395			Reflector Unit (Quote R.H.D. or L.H.D. Front Rim Assembly			
			SERVICEABLE PARTS FOR SIDELAMP.			
*521989 *571211 *522869 *207			Rim Assembly less Glass Glass Wire Set: Reflector Fixing Bulb			
			SERVICEABLE PARTS— STOP TAIL LAMP.			
*572734 *572704 *188818 *572703 *552101			Rim Lens Sleeve: Terminal Body: Rubber Interior: Bulbholder			
			SERVICEABLE PARTS— NUMBER PLATE. NUMBER PLATE ILLUMINATION.			
\$572616 \$572596 \$572595 \$572039 \$5772588			Body Window Gasket Grommet: Cable Set of Sundries			
			*Lucas Accessories			

Part No.	PLATE No.	PLATE Ref.	Description	No. off R.H.D.	No. off L.H.D.	Remarks
			SERVICEABLE PARTS— REGULATOR BOX.			
391600 334906 334977 33143A 187022 101544 185029 121614			Cover Clip Resistance Regulator Eyelet Screw, 2 BA Spring Washer Terminal Screw	1 1 1 1 1 1 1 5	1 1 1 1 1 1 5 5	
188219			Fuse: 50 Amp OIL PRESSURE PIPES AND WIRING CLIPS.	4	4	
400457 C.7084 C.10138			Flex to Gauge Oil Pressure Pipe Assy. Oil Pipe Union Washer Oil Pipe to Engine Case Flex	1 2	1 2	
*187085 *187081 *187033 *187033 *187012 *187051 *850882 *187048 *187093 C.6523 RH.103/8 N.100K *** *** *** *** *** *** *** *** ** **			Wiring Clip: Front Wing Support Stay Wiring Clip: Dash Panel Wiring Clip: Steering Box Wiring Clip: Bonnet Side to Flitch Wiring Clip: Flitch to Chassis Wiring Clip: Screen to Rail Wiring Clip: Deck Board Batten Wiring Clip: Tool Deck Ply (Underside) Wiring Clip: Tool Deck Ply (Underside) Wiring Clip: Tail Lamp Cable Wiring Clip: Chassis Harness to Frame Wiring Clip: Chassis Harness to Frame Wiring Clip: Chassis Harness to Frame Clip Fixing Screw Clip Fixing Nut Shakeproof Washer Clip: Oil Gauge Flex	1 1 6 1 1	2 2 1 6 1 1 2 1 6 1	
			*Lucas Accessories			

-	No.	Rev.	DESCRIPTION	R.H.D.	No. off L.II.D.	Remarks
			ACCELERATOR PEDAL DETAILS AND FIXINGS.			
400583	12	85	Accelerator Control Shaft Assembly	1		
400334			Accelerator Control Shaft Assembly		1	
400645	1	86	Accelerator Control Shaft Spring	1	1	
FB.104/9 FB.104/10			Accelerator Control Shaft Bolt	3	3	
N.104K			Accelerator Control Shaft Nut	4	4	
4" Dia. Ext.			C1 1 C111 1	4	4	
400353			Accelerator Cable Assembly	1	1	
C.5475 W.103K			Accelerator Cable Swivel Pin Accelerator Cable Swivel Pin Washer	$\frac{1}{2}$	$\frac{1}{2}$	
N.100K			Accelerator Cable Swivel Pin Washer	1	1	
400453			Accelerator Cable Ferrule	i	î	
N.106K	-		Accelerator Cable Ferrule Nut	1	1	
3" Dia. Ext. RH.103/10			Shakeproof Washer	1	1	
N.100K			Accelerator Cable Clip Screw	1	1	
3." Dia. Ext.			Shakeproof Washer	ī	î	
C.7808A			Ball Joint: Accelerator Cable	1	1	
N.100K 36" Dia. Ext.			Ball Joint Locknut Shakeproof Washer	1	$\frac{1}{1}$	
C.6491			Shakeproof Washer Carburettor Return Spring	1	1	
C.8493			Accelerator Return Spring Bracket	ī	ī	
			FRONT BUMPERS—NUMBER PLATE.			
			12112.			
400602			Front Bumper and Number Plate Assy.	1	1	
400594 400595			Front Bumper Blade and Bracket Assy. Blade Complete with Bolts, Nuts and	1	1	
400393	i		Washers	1	1	
400596			Front Bumper Bracket	$\hat{2}$	2	
C.3806		i	Front Number Plate	1	1	
W.106K 400600			Front Number Plate Spacing Washer	$\begin{array}{c c} 4 \\ 2 \end{array}$	4 2	
FB.107/10D			Packing Piece Bumper Bracket and Wing Stay to Frame Bolt	2	2	
FB.107/7D			Bumper Bracket to Frame Bolt	2	2	0.30
W.107K		-	Front Bracket to Frame Washer	2	2	
76" Dia. Ext.			Shakeproof Washer	4	4	
			REAR BUMPERS.		1	
400624N.D. 400570			Rear Bumper Assembly	1	1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	Remarks
400571 C.5841 N.106K ¾" Dia. Ext. C.7046 C.7047 400575 400577 N.106K ¾" Dia. Ext. FB.105/7 FB.105/6 ¼" Dia. Ext.	12	87	Rear Bumper Reinforcement Bar Rear Bumper Blade Bolt Rear Bumper Blade Nut Shakeproof Washer Rear Bumper Bracket Assy.: L.H. Rear Bumper Bracket Assy.: R.H. Bumper Blade to Bracket Bolt Bumper Blade to Bracket Distance Piece Bumper Blade to Bracket Nut Shakeproof Washer Rear Bumper Bracket to Frame Bolt Rear Bumper Bracket Bolt Shakeproof Washer	1 3 3 3 1 1 2 2 2 2 4 2 6	1 3 3 3 1 1 2 2 2 2 4 2 6	
			FRONT WINGS, BONNET SIDES AND LOUVRES—STEPBOARDS.			
400137 400138 400511 400512 C.4546 C.4547 400400 400401 400303 400304 400305 026468 RK.103/8C N.100K ³ / ₁₆ " Dia. Ext.			Front Wing: L.H. Front Wing: R.H. Bonnet Side Complete with Louvres and Slats: L.H. Bonnet Side Complete with Louvres and Slats: R.H. Louvre Assembly: L.H. Louvre Assembly: R.H. Fixed Bonnet Side Stay Bracket: L.H. Fixed Bonnet Side Stay Bracket: R.H. Lock: L.H. Lock: L.H. Lock: R.H. Lock Escutcheon Buffer Raised Countersunk Screw Nut Shakeproof Washer	1 1 1 1 1 1 1 1 1 1 2 8 4 4 4	1 1 1 1 1 1 1 1 1 1 2 8 4 4 4	
			FRONT WING STAYS AND FLITCH ASSEMBLY.			
400226 400227 FS.106/6 W.206K ³ 6" Dia. Ext. N.106K 400229 400230 FS.104/6			Front Wing Stay: L.H. Front Wing Stay: R.H. Bolt: Front Wing Stay to Front Flitch Washer: Front Wing Stay to Front Flitch Shakeproof Washer Nut: Front Wing Stay to Front Flitch Front Flitch Assembly: L.H. Front Flitch Assembly: R.H. Front Flitch to Frame Set Pin	h 4 2 2 1 1 1	1 1 2 4 2 2 1 1 6	

Part No.	PLATE No.	PLATE REF.	Description	No. off	No. off L.H.D.	Remarks
W.104K			Front Flitch to Frame Washer	6	6	3,5
1" Dia. Ext.				6	6	
			Shakeproof Washer	6	$\begin{array}{c c} 6 \\ 2 \end{array}$	
RH.103/8 N.100K			Screw: Front Valance to Wing	$\frac{2}{2}$	$\frac{2}{2}$	
			Nut: Front Valance to Wing	2	$\frac{2}{2}$	
3" Dia. Ext.			Shakeproof Washer	6	6	
400228 C.7243ND			Screw: Bonnet Side to Bonnet Landing	2	2	
			Flitch Packing Set Pin: Bonnet Side to Flitch	10	10	
FS.104/4				1	12	
N.104K			Nut: Bonnet Side to Flitch	12	12	
W.204K			Washer: Bonnet Side to Flitch	12		
1" Dia. Ext.			Shakeproof Washer	12	12	
2BA/B4			Set Pin: Bonnet Side to Flitch and		4	
N. LOOT.			Valance	4	4	
N.100K			Nut: Bonnet Side to Flitch and Valance	4.	4	
W.103K			Washer	4	4	
400261			Channel Reinforcement: Front Flitch	2	2	
400399			Fixed Bonnet Side Stay	2	2	
FS.105/5			Fixed Bonnet Side Stay Set Pin	4	4	
5 " Dia. Ext.			Shakeproof Washer	4	4	
FS.104/4			Fixed Bonnet Side Stay to Wing Set Pin	4	4	
N.104K			Fixed Bonnet Side Stay to Wing Nut	4,	4	
¹ " Dia. Ext.			Shakeproof Washer	4	4	
400402			Reinforcement: Bonnet Side Dash Top:	1	1	
400400			L.H	1	1	
400403			Reinforcement: Bonnet Side Dash Top:			
NY 4 1/1 D TZ			R.H	1	1	
No. $4 \times \frac{1}{4}$ P.K.			Screws: Reinforcement	4	` 4	
400425			Wing Stay Packing	2	2	
FS.104/4			Set Pin: Front Wing and Bonnet Side	10	7.0	
*** 00 4**			Assembly	12	12	
W.204K			Washer: Front Wing and Bonnet Side			
70 - 0 - 1			Assembly	12	12	
FS.104/5			Set Pin: Bonnet Side to Flitch and			
70.446			Radiator Stay	2	2	
FS.106/5			Set Pin: Front Wing Stay Fixing	4	4	
W.206K		. 1	Washer: Front Wing Stay Fixing	4	4	
³ " Dia. Ext.			Shakeproof Washer Stepboard Assembly : L.H	4	4	
400237			Stepboard Assembly: L.H	1	1	
400238			Stepboard Assembly: R.H	1	1	
400239			Stepboard Capping Front End	2	2	
C.5396			Stepboard Tread: Short	2	2	
C.5397			Stepboard Tread: Long	2	2	
B.8166			Stepboard Tread End Ferrule	8	8	
FB.105/6	1		Bolt: Stepboard To Wing: Front	4	4	
N.105K	-		Nut: Stepboard to Wing: Front	4	4	
W.205K			Washer: Stepboard to Wing: Front	4	4	
			REAR WINGS.	-		
100448		- 1	Rear Wing: L.H	1	1	
100449			Rear Wing: R.H.	ī	1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	Remarks
			RADIATOR CASE.			
00203	14	11	Radiator Case Complete Assembly	1	1.	
00242		12	Radiator Case Plating Assembly (Less			
			Grille Slats)	1	1	
00247		13	Radiator Grille Assembly	1	1	
C.6914			Radiator Grille Bottom Pad	1	1	
00597			Clip Landing to Radiator Case	2	2	
RH.103/6C			Fixing Screw	2	2	
1.100K			Fixing Nut	2	2	
g" Dia. Ext. 2.3836E		99	Shakeproof Washer	2	2	
6913		22	Radiator Name Plate with Fixings	1	1 1	
H.103/4C			Radiator Grille Top Pad Fiving Screw Crille to Cook	6	6	
I.103/4C I.100K			Fixing Screw: Grille to Case Fixing Nut: Grille to Case	6	6	
Dia. Ext.			Cl1 C XX7 - 1	6	6	
.5348		23	D 11 7 34 .16	1	1	
K.103/12		20	Radiator Motif Radiator Motif Fixing Screw	2	2	
1.100K			Radiator Motif Fixing Nut	2	2	
" Dia. Ext.			Shakeproof Washer	2	2	
00275			Radiator Case Bottom Bracket	1	1	
H.103/8			Radiator Case Bottom Bracket Screw	4	4	
" Dia. Ext.			Shakeproof Washer	4	4	
B.104/6			Bolt: Radiator Case Btm. Bkt. to Frame	2	2	
I.104K			Nut: Radiator Case Btm. Bkt. to Frame	2	2	
Dia.Ext.			Shakeproof Washer	2	2	
00161			Front Valance	1	1	
No. $11 \times \frac{7}{16}''$			Bifurcated Rivets	2	2	
			BONNET LANDING.			
00206			Bonnet Landing Assembly	1	1.	
00208		-	Bonnet Landing to Rad. Case Assy. L.H.	1	1	
00209			Bonnet Landing to Rad. Case Assy. R.H.	1	1	
00272		1	Bonnet Rest Rubber	1	1	
.5025	1646		Bonnet Rest Bracket	2	2	
K.104/11		-	Bonnet Rest Bracket Screw	2	2	
.104K			Nut: Landing to Radiator Case	2	2	
o. $4 \times \frac{1}{2}$ P.K.			Fixing Screw: Rest Rubber	4.	4	
Dia. Ext.			Shakeproof Washer	2	2	
			BONNET TOP.			
00276			Bonnet Top Assembly Complete	1	1	
00446			Bonnet Top Assembly: L.H	1	1	
00447			Bonnet Top Assembly: R.H	1	1	
00319			Bonnet Lock Striker Plate: L.H.	1	1	
00320 5.5226A	,		Bonnet Lock Striker Plate: R.H.	1	1	
DZZDA		1	Bonnet Hinge Centre	1	1	

Part No.	PLATE No.	PLATE REF.	DESCRIPTION	No. off	No. off	Remarks
400363 C.4657 C.9880 N.D. C.6558 N.D. C.6547D C.7040 N.D. C.6562 N.D. C.6373 C.9752 N.D. C.7476 N.D. C.7475 N.D. C.7475 N.D. C.7475 N.D. C.6652 C.6551 C.6552 C.6553 N.D. C.6554 N.D. C.6555 N.D. C.7053 B.6751			TOOLS. Starting Handle Pliers Tyre Inflator Distributor Spanner Wheel Brace \$\frac{16}{16}'' - \frac{3}{8}'' \text{ Open-ended Spanner} \text{ Tyre Lever} \text{ Tappet Spanner} \text{ Grease Gun} \text{ Tyre Valve Extractor} \text{ Tyre Valve Split Ring} \text{ Tyre Lever} : 6\frac{1}{2}'' \text{ Oiling Funnel} \text{ Screwdriver} : 4" \text{ (82/.92" Box Spanner} \text{ (90/.71" Box Spanner} \text{ (445/.525" Box Spanner} \text{ (700 Bag Assembly} (100 Color of the color o	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 1 1 1 1 1 1 1 1 1 1	
C9708 C.6550 N.D. 400749 400750 *54039A *538316 *100034 *188333 Lucas 31359A Lucas 860577 Lucas 850103 Lucas 851103 Lucas 860578			OPTIONAL EXTRAS Front Bumper Over-rider Assembly Rear Bumper Over-rider Assembly Trafficators SF.34L Trafficators Fixing Brackets Trafficators Fixing Brackets Trafficators Fixing Brackets Washers Trafficators Switch Trafficators Earth Wire Trafficators Switch Wire : L.H. Trafficators to Switch Wire R.H. Trafficators Switch to Fuse Box Wire	1 1 2 2 2 1 pr. 2 2 2 1 1 1 1	1 1 2 2 2 1 pr. 2 2 2 1 1 1 1	
B.9741A B.9741B B.9021 B.9215A B9743 B.7832			BODY Body Shell Assembly	1 1 1 1 1 1	1 1 1 1 1	

Part No.	PLATE No.	PLATE REF.	Description	No. off	No. off L.H.D.	Remarks
B.7833 B.9062 B.8774 B.8774A B.9735 B.9936 B7185 B.9271 B.8490 B.8491 B.9067 B.7166A B.8493 B.8706 B.8707 B.8479 B.8480 B.7229 B.9854 B.9855			Quadrant Assembly: Trunk Lid O.S. Spare Wheel Pan Shield Assembly Scuttle Side Panel Assembly: O.S. Scuttle Side Panel Assembly: N.S. Scuttle Side Panel Assembly: N.S. Scuttle Side Panel Assembly: O.S. Spare Wheel Panel Assembly: O.S. Spare Wheel Panel Assembly: O.S. Wheel Arch Panel Assembly: N.S. Wheel Arch Panel Assembly: N.S. Wheel Arch Panel Assembly: O.S. Dash Rail Assembly Seat Pan Top Water Channel Side Water Channel: N.S. Side Water Channel: O.S. Quarter Panel: Front N.S. Quarter Panel: Front O.S. Top Rail Panel Tool Deck Panel Assembly Tool Deck Panel Assembly			
			DOORS.			
B.9035 B.9036 B.7227 B.7228 B.8833 B.8834			Door Assembly: N.S	1	1 1 1 1 1	
			DOOR HINGES—LOCKS— HANDLES.			
B.9735 B.9736 B.9737 B.9738 CK.104/28 N.104K W.204K B.9739 B.9740 B.7262 B.7263 BD.1182×5A 026670 026671			Door Hinge: Top N.S. Door Hinge: Top O.S. Door Hinge: Bottom N.S. Door Hinge: Bottom O.S. Screw: Door Hinge Nut: Door Hinge Washer: Door Hinge Trunk Lid Hinge: N.S. Trunk Lid Hinge: O.S. Door Lock Complete: N.S. Door Lock Complete: O.S. Buffer Striking Plate Budget Lock Boot Lid: O.S. Budget Lock Boot Lid: N.S.	1 1 1 8 8 8 8 1 1 1 1 4 4	1 1 1 1 8 8 8 8 1 1 1 1 1 4 1	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off L.H.D.	REMARKS
BD.334×5			Budget Lock Plate	2	2	
B.6320			Buffer: Trunk Lid	2	$\begin{bmatrix} 2\\2 \end{bmatrix}$	
B.6390		7	Washer: Trunk Lid Buffer	2	2	
3D.1182×5A			Striking Plate: Trunk Lid Buffer	2	2	
3.6090B			Outside Door Handle: O.S	ī	1	
3.6090A			Outside Door Handle: N.S	1	1	
3.9609			Striker Plate	2	2	
3D.1080×4A			Door Buffer	4	4	
3D.1050×4B			Door Buffer Plate	4	4	
3.9195			Door Draught Excluder	2	2	
3.9047			Grab Handle	1	1	
3.6093			Inside Door Handle	2	2	
3.6389			Inside Door Handle Grub Screw	2	2	
3.9017			Trap Cover: Spare Wheel Tray	1	1	
" × No. 6			Round Head Oxidised Parker Kalon		1	
0.04/0.1			Screws	3	$\begin{vmatrix} 3 \\ 1 \end{vmatrix}$	
3.8469A			Footwells, Tunnel and Heelboard Assy.	1	1	
3D.3459 × 4 " × No. 8			Trap Cover: Seat Pan	1	1	
X 10. 0			Screws	1	1	
			ociews	1	1	
			MOUNTING.			
3.9032			Rear Mounting Bracket Assembly: N.S.	1	1	
3.9033			Rear Mounting Bracket Assembly: O.S.	1	1	
B.104/5			Bolt: Mounting Bracket	4	4 4	
N.104K			Nut: Mounting Bracket	10	10	,
$3D.3397 \times 4$ $B.106/10$			Body Mounting Pad Bolt: Rear Mounting	2	2	
B.106/17			Bolt: Rear Mounting	2	2	
B.106/18			Bolt: Front and Inter Mounting	4	4	
immonds			Bott . I folic and Intel Mounting			
NP/F/124			Nut	8	8	
V.106K			Washer	8	8	
2.6396			Washer	8	8	
B.104/6			Bolt: Tie Rod to Chassis	2	2	
" Dia. Ext.			Shakeproof Washer	2	2	
I.105K			Nut: Tie Rod Stud	4	4	
3.9838			Toeboard Strap Assembly	1	1	
.9835			Toeboard Strap Assembly N/S		1	
3.9836			Toeboard Strap Assembly O/S	1		
.10033			Bonnet Rest Rubber	1	1	*
.9926			Number Plate Bracket Assembly Rear	1	1	
.9975			Cable Clip: Rear Number Plate	1	1 1	
INVUN		-	Grommet: Rear Number Plate Cable	1		
26896 26894			Grommet: Stop Tail Lamp Cable	2	2	

Part No.	PLATE No.	PLATE REF.	Description	No. off R.H.D.	No. off	Remarks
			WINDSCREEN.			
3.9839			Windscreen Assembly	1	1	
3.9839A			Windscreen Assembly (Laminated Glass)	1	1	Special Export
3.9840A			Windscreen Glass	1	1	Orders
3.9840			Windscreen Glass			
3.9716			Stanchion Assembly: N.S.	1	1	
3.9717 3.9720			Stanchion Assembly: O.S	$\frac{1}{2}$	$\frac{1}{2}$	
3.9721			D M . C. 1:	2	2	
3.9722			Swivel Pins	2	2	
3.9723		-	Swivel Pin Washer	2	2	
.9724			Swivel Pin Chamfer Washer (Thumb			
			Screw)	2	2	
3.9817			Clips: Cable	4	4	
3D.3813A/4			Screw: Cable Clip	4	4.	
			SEATS.	-		
.9902			Rear Cushion Complete Assembly	1	1	
3.9905			Rear Squab Complete Assembly	1	1	
3.9861			Front Seat Assembly	2	2	
.9862			Front Seat Squab	2	2	
3.9863			Front Seat Cushion Assembly	2	2	4
.9886			Front Seat Hinge Link	4	4	
3.9256			Front Seat Hinge Bolt	4	4	
V.105K V.105K			Front Seat Hinge Nut	8	8	
.9942			Front Seat Hinge Washer Front Seat Hinge Brkt. Assembly: L.H.	2	2	
CK.104/20			Screw	20	20	
3.9943			Front Seat Hinge Brkt. Assembly: R.H.	2	2	
.9972	-		Washer	4	4	1 1
$D.3273 \times 2$			Sliding Seat Fitting Assembly	2	2	
$D.3273 \times 2A$			R.H. Slide: Top	2	2	
$3D.3273 \times 2B$			R.H. Slide: Bottom	2	2	
$D.3273 \times 2C$			L.H. Slide: Top	2	2	
$D.3273 \times 2D$			L.H. Slide: Bottom	2	2	
			FLOORBOARDS.			
3.9756			Floorboard: Front N.S	1		
3.9756A	1		Floorboard: Front N.S		1	
3.9757		1	Floorboard: Front O.S	1	1	
3.9758B			Toeboard: Top	1		
3.9758A			Toeboard: Top	1	1	
3.9759 3.9759A			Toeboard: Bottom	1	1	
.9139M V		-	Tocooaid: Dolloili	1	1	

Part No.	Pi.xrr No.	PLATE REF.	Description	No. off	No. off	Remarks
CK.104/15 CK.104/17 B.6110 B.9760 No. 8 B.8474 ½" × No. 8	sole .	te	Screw Screw Screw Washer Gearbox Cover Chrome Cup Washers Telegauge Cover Round Head Parker Kalon Screws	6 12 22 1 11 1 2	6 11 21 -1 11 1 2	
			CARPETS AND TREAD PLATES.			
B.9227 B.9228 B.8797 B.9230 B.8801 B.8802 B.8803 B.8532A Carr 75/203 Carr 541A Carr 541 Carr 757/1 B.7180A B.7181A			Floor Carpet Assembly: O.S. Floor Carpet Assembly: N.S. Tunnel Carpet Toeboard Carpet Assembly Floor Underfelt: N.S. Floor Underfelt: O.S. Toeboard Underfelt Floorboard Felt Carpet Fastener Pronged Ring: Floor Carpet Socket: Floor Carpet Stud Tread Plate: N.S. Tread Plate: O.S.	1 1 1 1 1 1 1 1 28 2 2 2 2 1 1	1 1 1 1 28 2 2 2 2 1	L.H.D. B.9227A L.H.D. B.9228A L.H.D. B.9230A
			HOOD.			
B.8949 Carr 680 Carr 609 Carr 708A Carr 671-548-457 B.8191 B.8196 B.9302 B.9302A			Hood Assembly	1 10 14 14 14 6 1 1	1 10 14 14 6 1 1	
			SIDE SCREENS.			
B.9968 B.9978 B.9977 B.9964 B.9800			Side Screen Assembly: O.S. (Glass) ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	1 1 1 1	1	Special Export only Standard

PART No.	PLATE No.	PLATE REF.	Description	No. off	No. off L.H.D.	REMARKS
B.9800A B.9801 B.9801A Carr			Side Screen Assembly: N.S. (Celluloid) Side Screen Assembly: O.S. (Celluloid) Side Screen Assembly: O.S. (Celluloid)	1	1	Standard
671-548-457 B.7211 B.7212 RK.103/5C B.8647 R.103/5C			Press Studs: Side Screen Flaps (Complete sets) Front Bracket: Side Screen Rear Bracket: Side Screen N.S. Screw Windscreen Bracket: Side Screen N.S. Screw	2 2 1 4 1 2	2 2 1 4 1 2	
			MISCELLANEOUS.			
B.7091C B.7090E BD.1242 × 1 BD.9714			Luggage Strap Luggage Strap Driving Mirror Driving Mirror Bracket	2 2 1 1	2 2 1 1	

EDWARDS THE PRINTERS LTD., COVENTRY



